



Diagonal lines indicate Strap bracing

FB = Fly brace position

RFB = Rigid Fly brace position

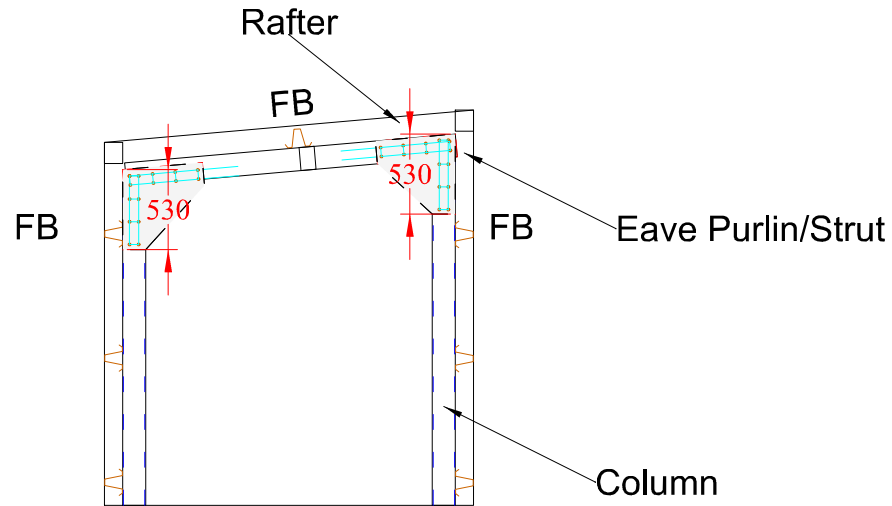

 Cross Section (Scale = 1:50)



**Capital Steel Limited**

Web: [www.capitalsteelbuildings.co.uk](http://www.capitalsteelbuildings.co.uk)  
Email: [info@capitalsteelbuildings.co.uk](mailto:info@capitalsteelbuildings.co.uk)

Supplied By: Murray Steel Buildings

Phone 01383 668820  
Email [peter@murraysteelbuildings.com](mailto:peter@murraysteelbuildings.com)

Customer: Mark Buxton

Core Wire, Station Road West, Ash Vale, ALDERSHOT  
, GU12 5LZ