


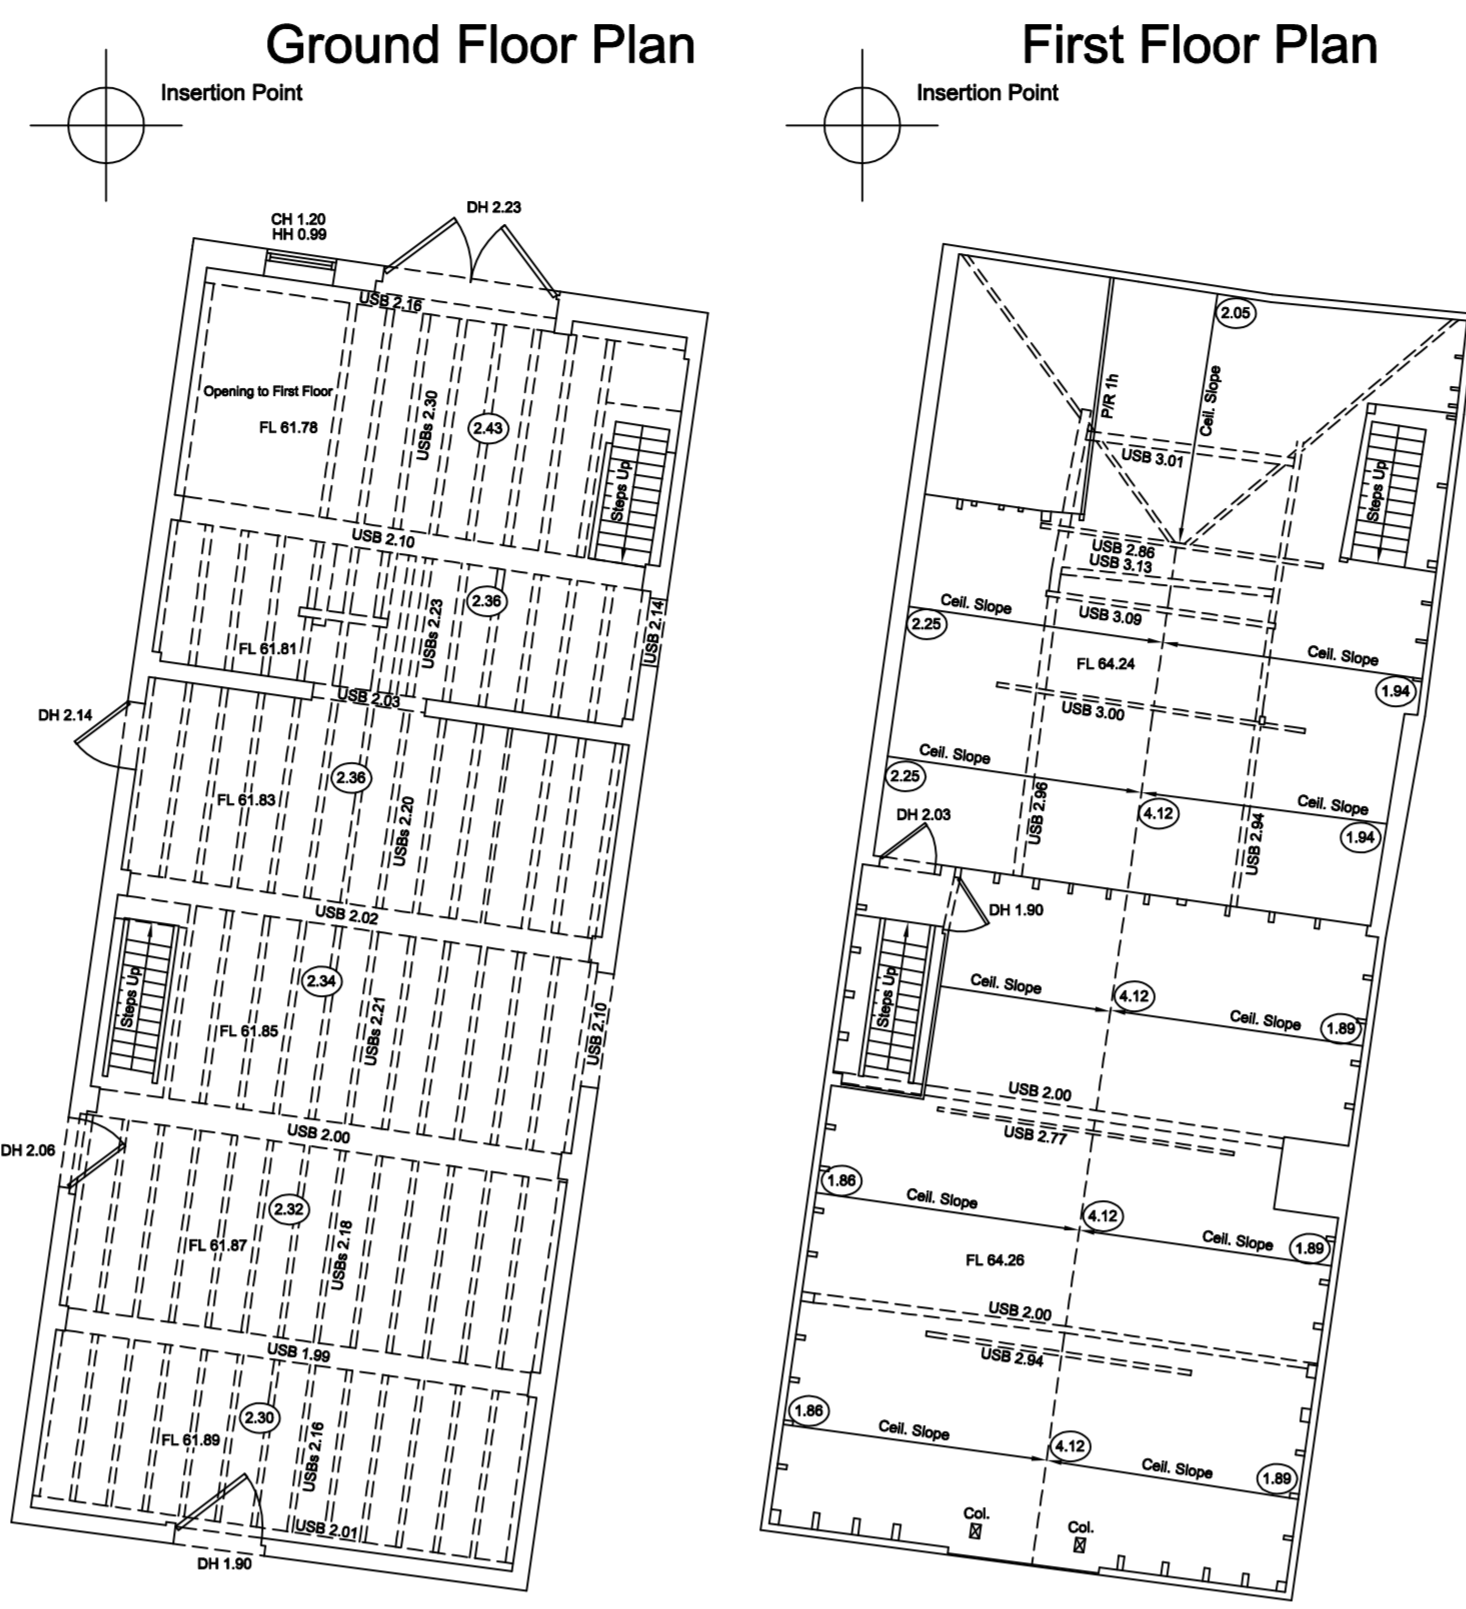


The Old Mill




The Grain Barn



The Open Barn

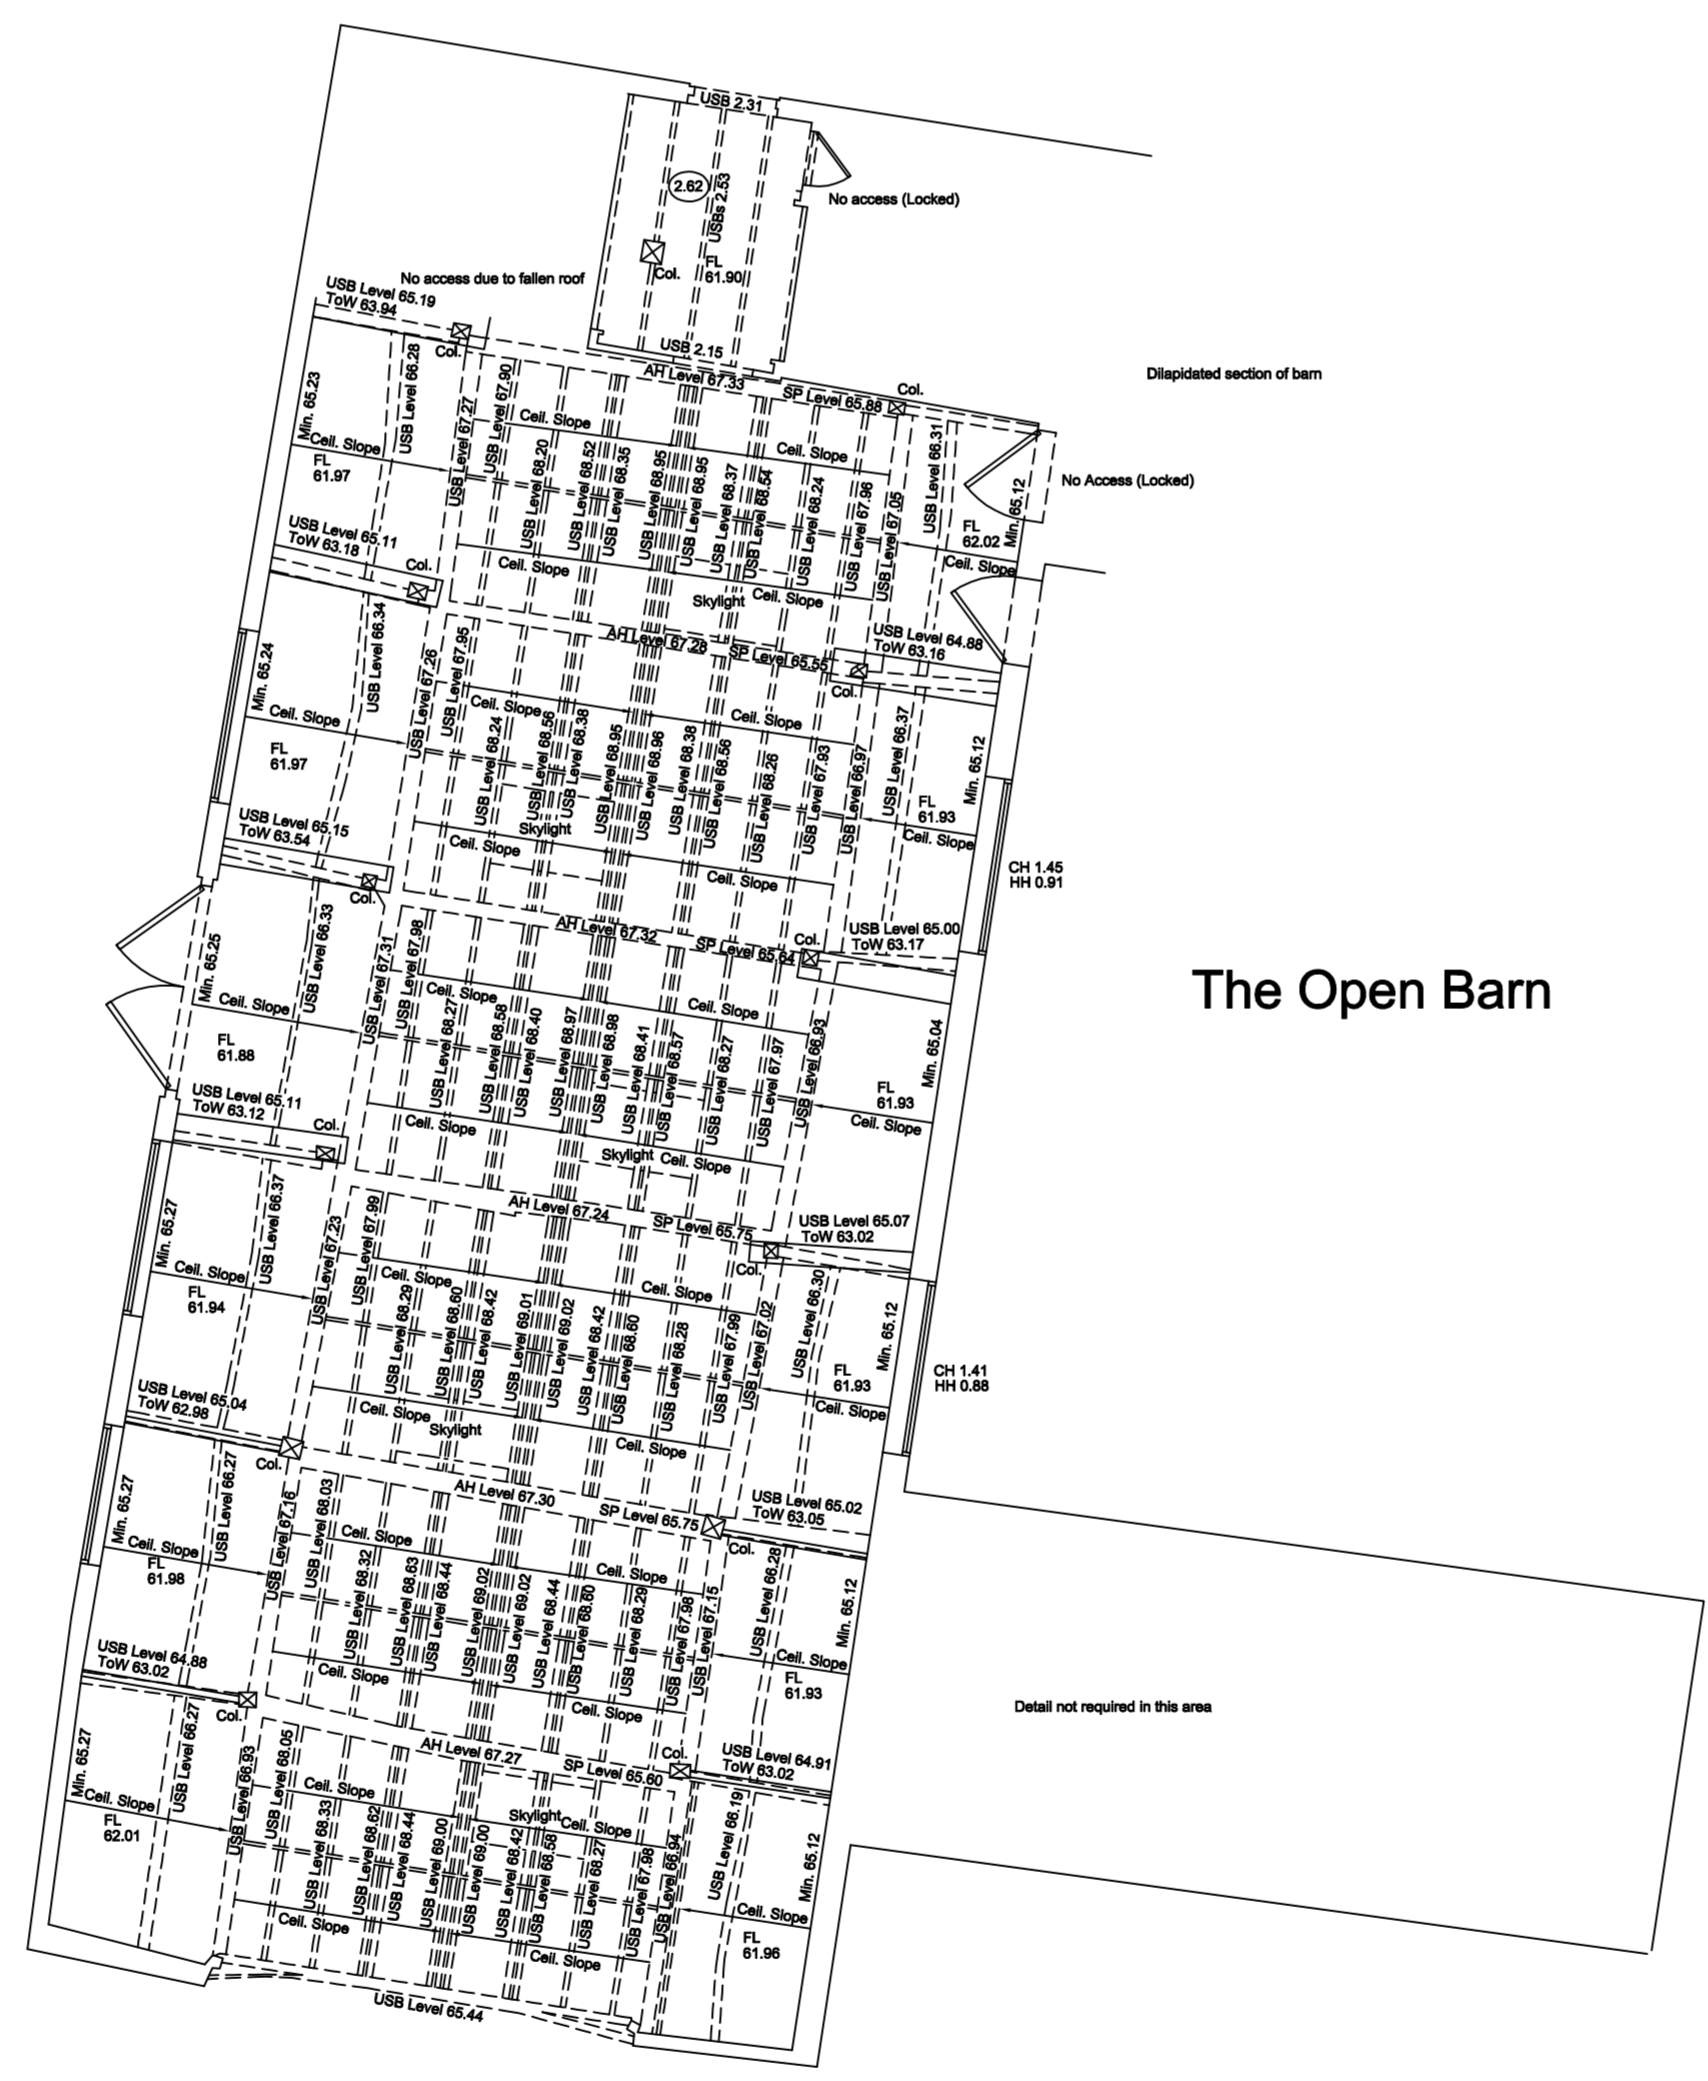

The Cartlodge

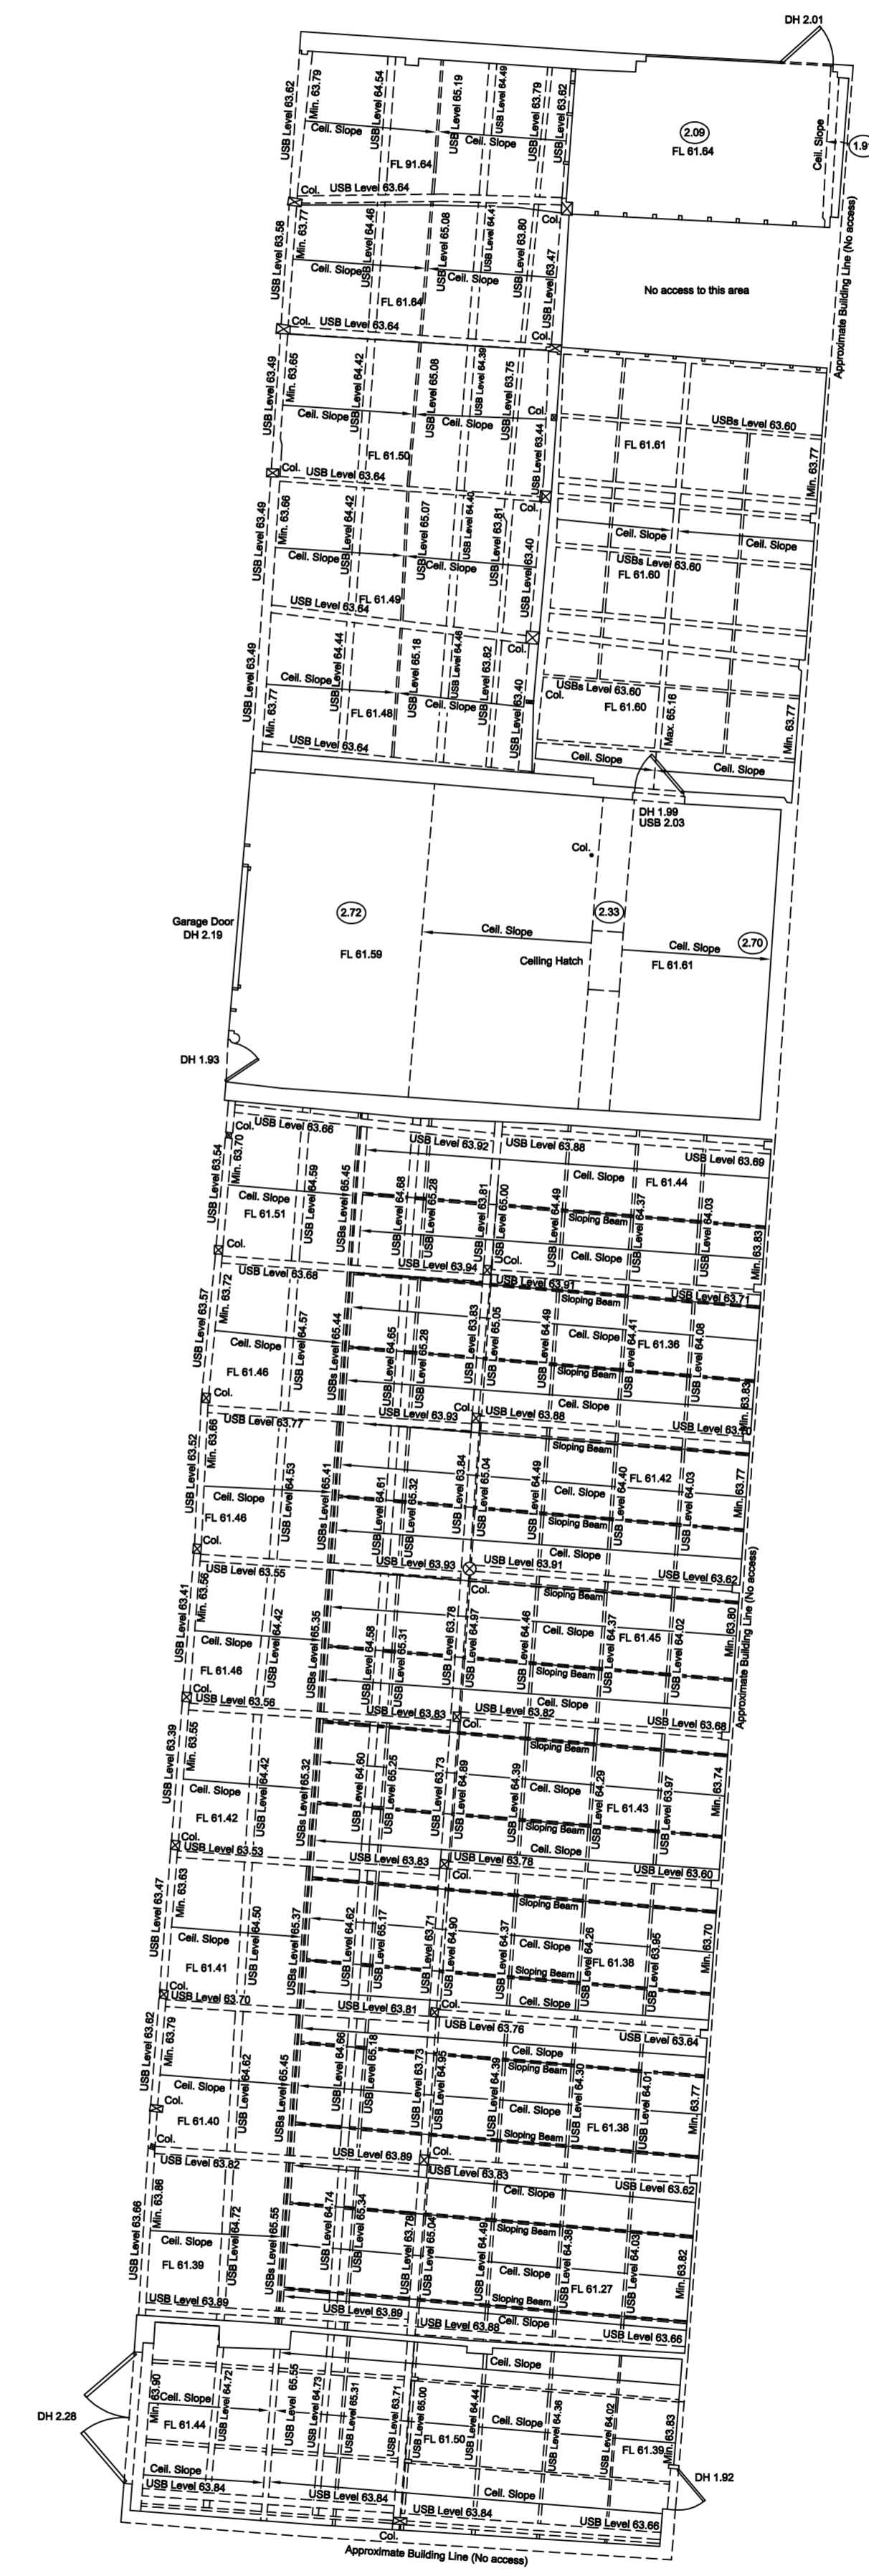

TOPOGRAPHICAL & MEASURED BUILDING SURVEYS

Table with 4 columns: Abbreviation, Description, Abbreviation, Description. Lists various surveying symbols and their meanings, such as 'Ae' for 'Arch Head Height', 'Ae' for 'Arch Head Height', 'Ae' for 'Arch Head Height', etc.

DRAWING NOTE

Topographical Surveys
Trees are drawn to scale showing the average canopy spread. Descriptions and heights should be used as a guide only.
All building names, descriptions, number of storeys, construction type including roof details are indicative only and taken externally from ground level.
All below ground details including drainage, voids and services have been identified from above ground and therefore all details relating to these features including: size, depth, description etc. will be approximate only. All critical dimensions and connections should be checked and verified prior to starting work.
Detail services and features may not have been surveyed if obscured or not reasonably visible at the time of the survey.

Measured Building Surveys

Measurements to internal walls are taken to the wall finishes at approx. 1m above the floor level and the wall assumed to be vertical.
CIL heights are measured as floor to the sill and head heights are measured from the top of window.
General
The contractor must check and verify all site and building dimensions, levels, utilities and drainage details and connections prior to commencing work. Any errors or discrepancies must be notified to Survey Solutions immediately.
The accuracy of the digital data is the same as the plotting scale implies. All dimensions are in metres unless otherwise stated.
The survey control listed is only to be used for topographical surveys at the stated scale. All control must be checked and verified prior to use.
© Land Survey Solutions Limited holds the copyright to all the information contained within this document and their written consent must be obtained before copying or using the data other than for the purpose it was originally supplied.
Do not scale from this drawing.

CONTROL CO-ORDINATES

Table with 4 columns: STATIONS, EASTINGS, NORTHINGS, LEVEL, DESCRIPTION. Lists control points and their coordinates.

SURVEY GRID AND LEVEL DATUM

All levels relate to previous EALS survey.

Table with 4 columns: REV, DESCRIPTION, DRAWN, DATE. Lists revision history.

SURVEY SOLUTIONS logo and contact information: Ipswich Coventry Yeovil Norwich Perth Nottingham Brentwood. Tel: 0845 0405 969, Fax: 0845 0405 970, www.survey-solutions.co.uk, enquiries@survey-solutions.co.uk

Table with 2 columns: PRODUCT TITLE, CLIENT, SURVEYOR, SURVEY DATE, CHECKED BY, APPROVED BY, DRAWING NUMBER, ISSUE DATE. Contains project details for Battisford Barns.