




04 - Eaves detail

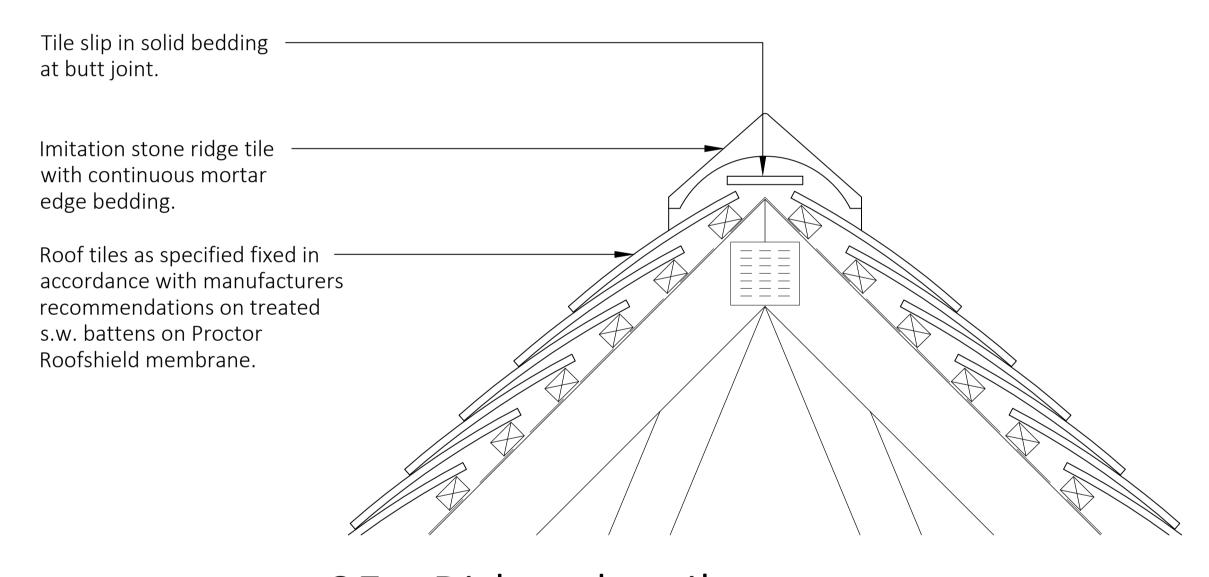

05 - Ridge detail

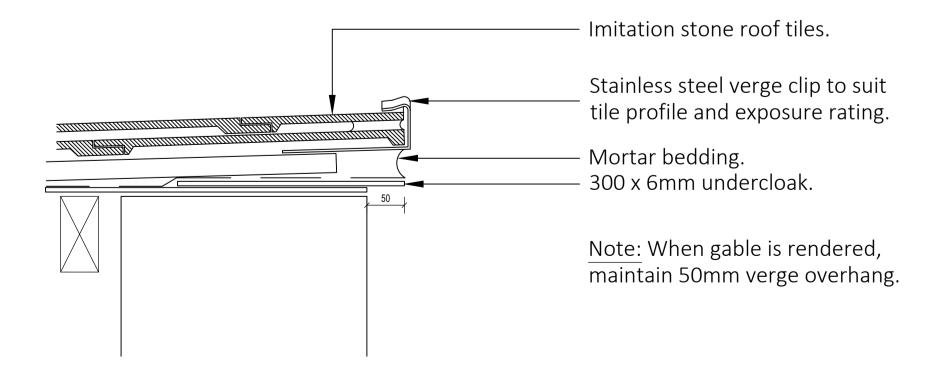


06 - Verge detail

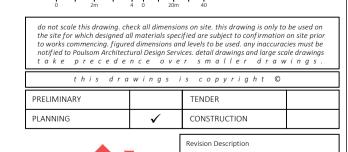

Poulsom

Drawing No. 161/106

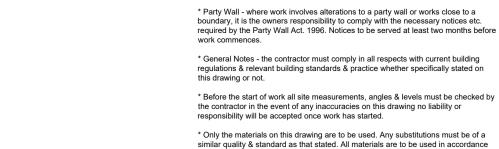

* Only the materials on this drawing are to be used. Any substitutions must be of a similar quality & standard as that stated. All materials are to be used in accordance with manufactures instructions unless otherwise directed. * All construction projects large and small are subject to the CDM Regulations (2015). If the development will be for a domestic Client or less than 30 days in duration then the responsibility for Health and Safety is then passed onto the Main Contractor. In all cases the Client may devolve the responsibility to a CDM Planning Supervisor, who will act on the Clients behalf. Please refer to Panning Supervisor for

* These drawings are for planning & building regulations approval only.

* Any works carried out prior to the necessary approvals being granted are carried

* These drawings are copyright and their use or reproduction without the written

* Before starting work you need to check if any asbestos is present, in Commercial properties there should be a plan/register - <u>Ask to see it</u>. You need to check that the plan covers the area of the building that you will be working in and if you are doing refurbishment work that it includes a survey that tells you what types of asbestos is present and its condition. If there is no Register or survey or the report is not clear - <u>Do not start work</u>.