


01 - Window head detail

The Ultimate Collection Heritage Style uPVC double glazed window installed in accordance with manufacturers recommendations.


Reconstructed stone cill with 100mm return at each end. DPC dressed around back of cill and below. DPC to extend 150mm beyond each end.

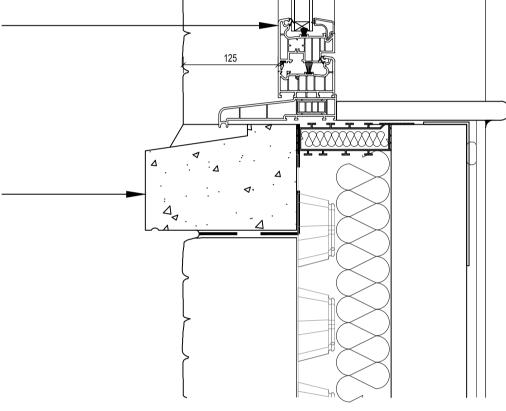


02 - Window cill detail


The Ultimate Collection Heritage Style uPVC double glazed window installed in accordance with manufacturers recommendations.


Reconstructed stone cill with 100mm return at each end. DPC dressed around back of cill and below. DPC to extend 150mm beyond each end.

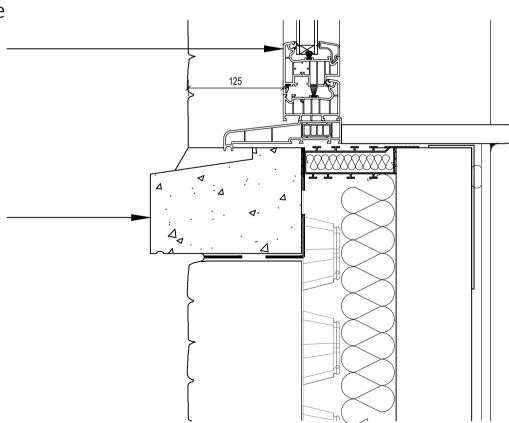


02 - Window cill detail

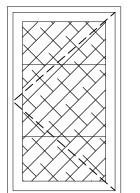


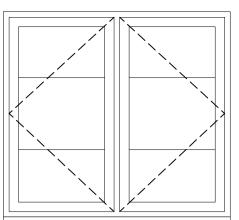

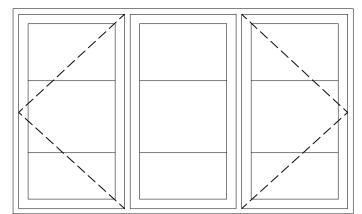

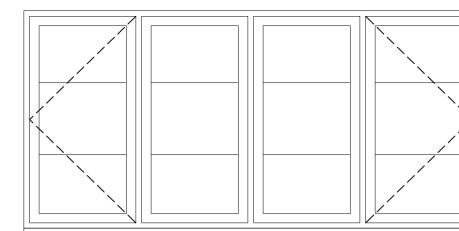

Window elevations

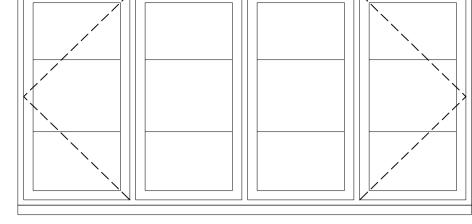

Window mullion

Window jamb

* These drawings are for planning & building regulations approval only. * Any works carried out prior to the necessary approvals being granted are carried

* These drawings are copyright and their use or reproduction without the written

* Party Wall - where work involves alterations to a party wall or works close to a boundary, it is the owners responsibility to comply with the necessary notices etc. required by the Party Wall Act. 1996. Notices to be served at least two months befor work commences.

* General Notes - the contractor must comply in all respects with current building regulations & relevant building standards & practice whether specifically stated on this drawing or not.

* Before the start of work all site measurements, angles & levels must be checked by the contractor in the event of any inaccuracies on this drawing no liability or responsibility will be accepted once work has started.


* Only the materials on this drawing are to be used. Any substitutions must be of a similar quality & standard as that stated. All materials are to be used in accordance

* All construction projects large and small are subject to the CDM Regulations (2015). If the development will be for a domestic Client or less than 30 days in duration then the responsibility for Health and Safety is then passed onto the Main


Contractor. In all cases the Client may devolve the responsibility to a CDM Planning Supervisor, who will act on the Clients behalf. Please refer to Panning Supervisor for

* Before starting work you need to check if any asbestos is present, in Commercial properties there should be a plan/register - Ask to see it. You need to check that the plan covers the area of the building that you will be working in and if you are doing

refurbishment work that it includes a survey that tells you what types of asbestos is present and its condition. If there is no Register or survey or the report is not clear - Do not start work.

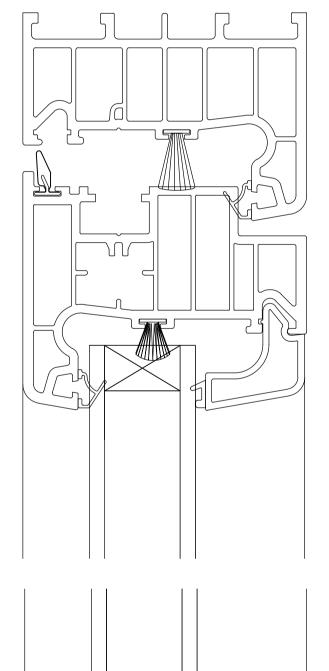

Window head

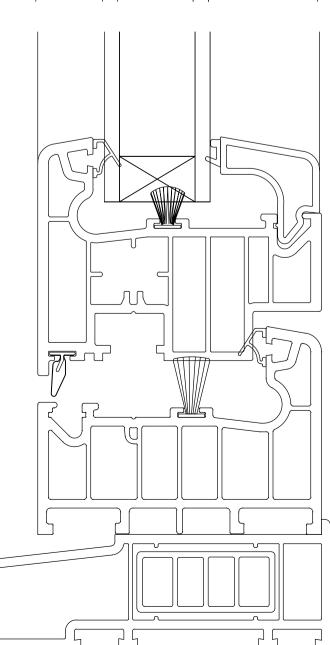

Window cill