
Fig 1

- Temporary barriers will be erected as shown by the thick green lines on the TPP to form the CEZ. The barriers will consist of 2m tall welded mesh panels (Heras) supported on rubber or concrete feet. The fence panels should be joined together using a minimum of two anti-tamper couplers installed so they can be removed from the inside of the fence. The distance between couplers should be at least 1m and be uniform throughout the fence.
- Panels should be supported on the inner side by stabilizer struts which should normally be attached to a base plate and secured with ground pins. Where the fence will be erected on hard surfacing or it is otherwise unfeasible to use ground pins the struts should be mounted on a block tray.

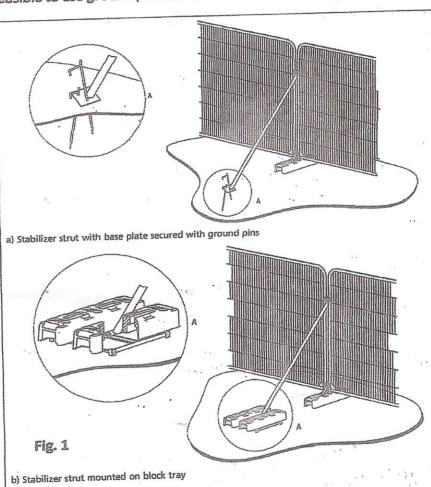

- Fig 1 is an extract from BS5837:2012 showing the method of supporting the panels with ground pins and a block mounted tray for use on hard surfaces. Stabiliser struts should be fitted at each panel junction.
- 3.5 At least two all-weather notices should be erected on the barriers forming each stating "Construction Exclusion Zone No Access ". These should face outwards towards the work area. Signs must be maintained in good condition and remain in place until completion of the works.