


HOW TO CREATE

Note: Use three adjacent ridge tiles for one Ridge Tile Crevice Feature



1. Notch out the underside of a ridge tile measuring 20mm high by 50mm wide.

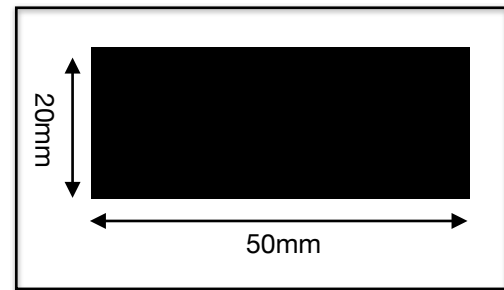


2. Or leave a gap in the mortar of the same size



3. Leave the gap mortar free when bedding the tile onto the ridge.



4. To ensure the three ridge tiles remain linked either; place a broken tile over the ridge and mortar only above the tile (left) or fill one side with mortar and leave the other side empty (do this on alternate sides to ensure the feature does not become draughty) (right).

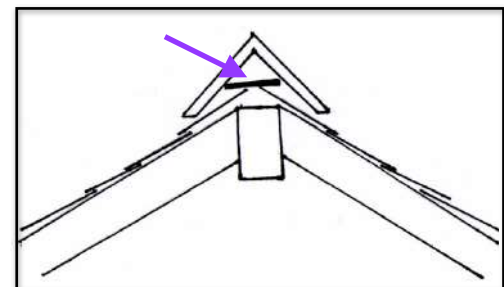

5. At each end of the three linked ridge tiles insert a solid mortar block to reduce through draughts.