



AS EXISTING

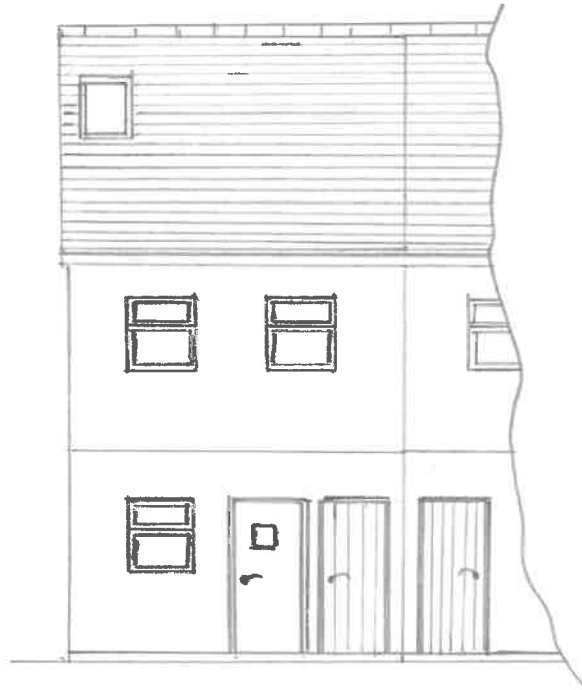

AS PROPOSED

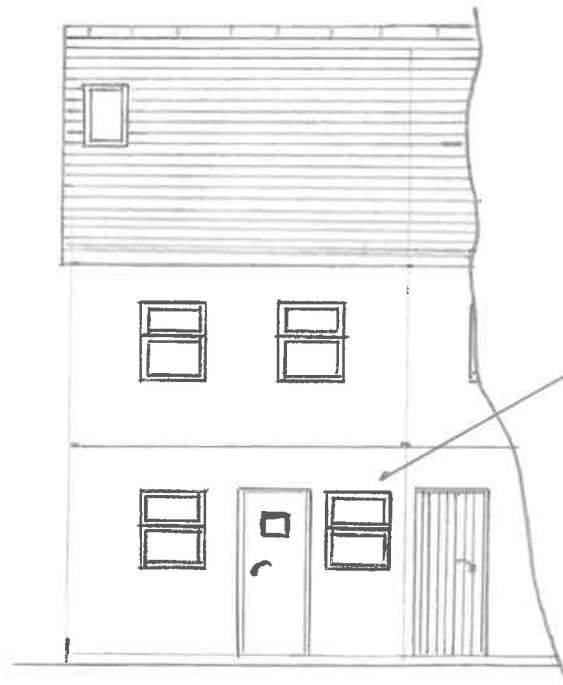

1. REMOVE EXISTING CUPBOARD DOOR.
2. BLOCK UP TO LEVEL OF NEW WINDOW.
3. FIT NEW WINDOW 830mm WIDE
4. RENDER WALL BELOW WINDOW TO MATCH EXISTING FINISH
5. PAINT WITH DULUX WEATHERSHIELD OR SIMILAR TO MATCH EXISTING FINISH.

NORTH ELEVATION

1:100