


South elevation 1:100





West elevation 1:100

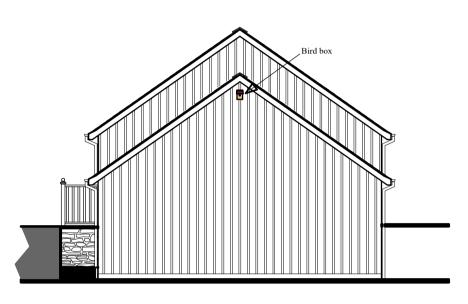


North elevation 1:100

Boxes should be made of waterproof insulating material, such as wood or woodcrete. Boxes made from thin wood, plastic, metal or solid ceramic may overheat, which is dangerous for birds.


WATERPROOF Make sure that water cannot get into the box where the roof is fixed.


WALLS


Box walls should be at least 15 mm thick to provide adequate insulation.

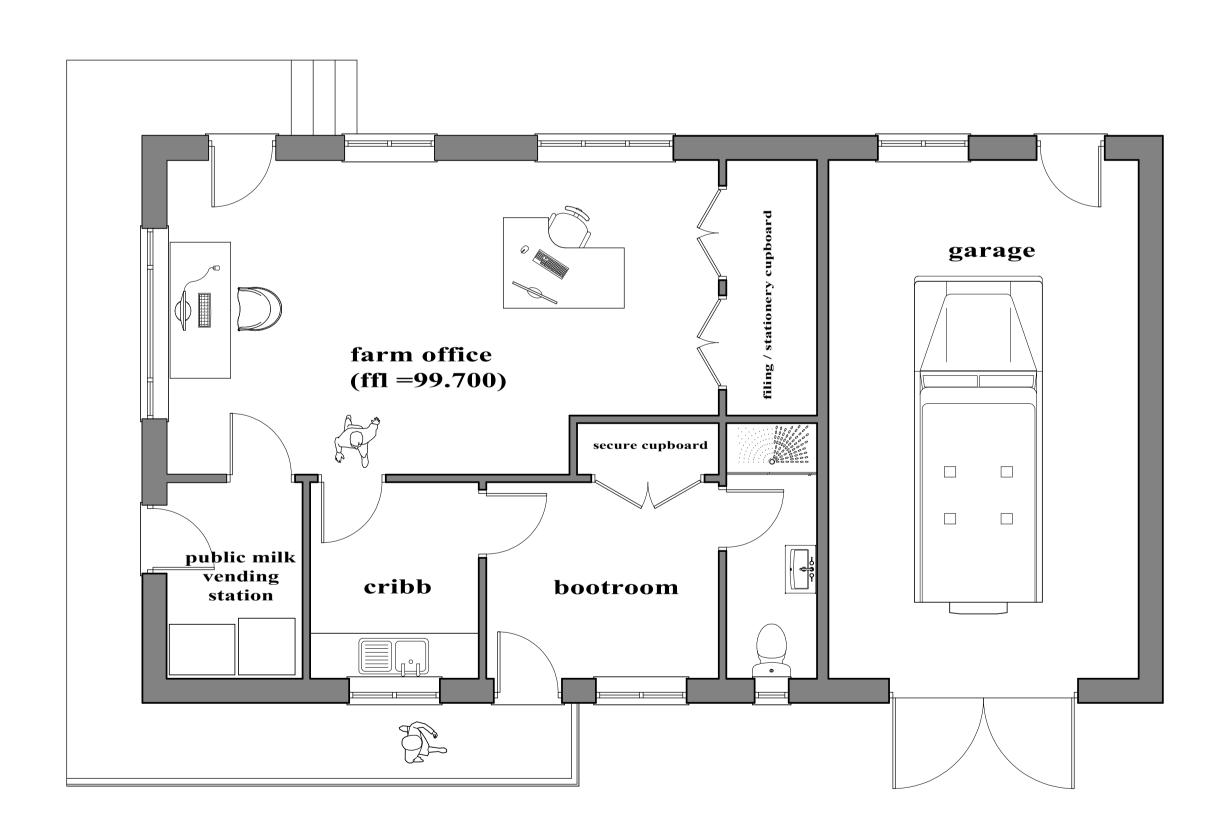


Floor plan 1:50



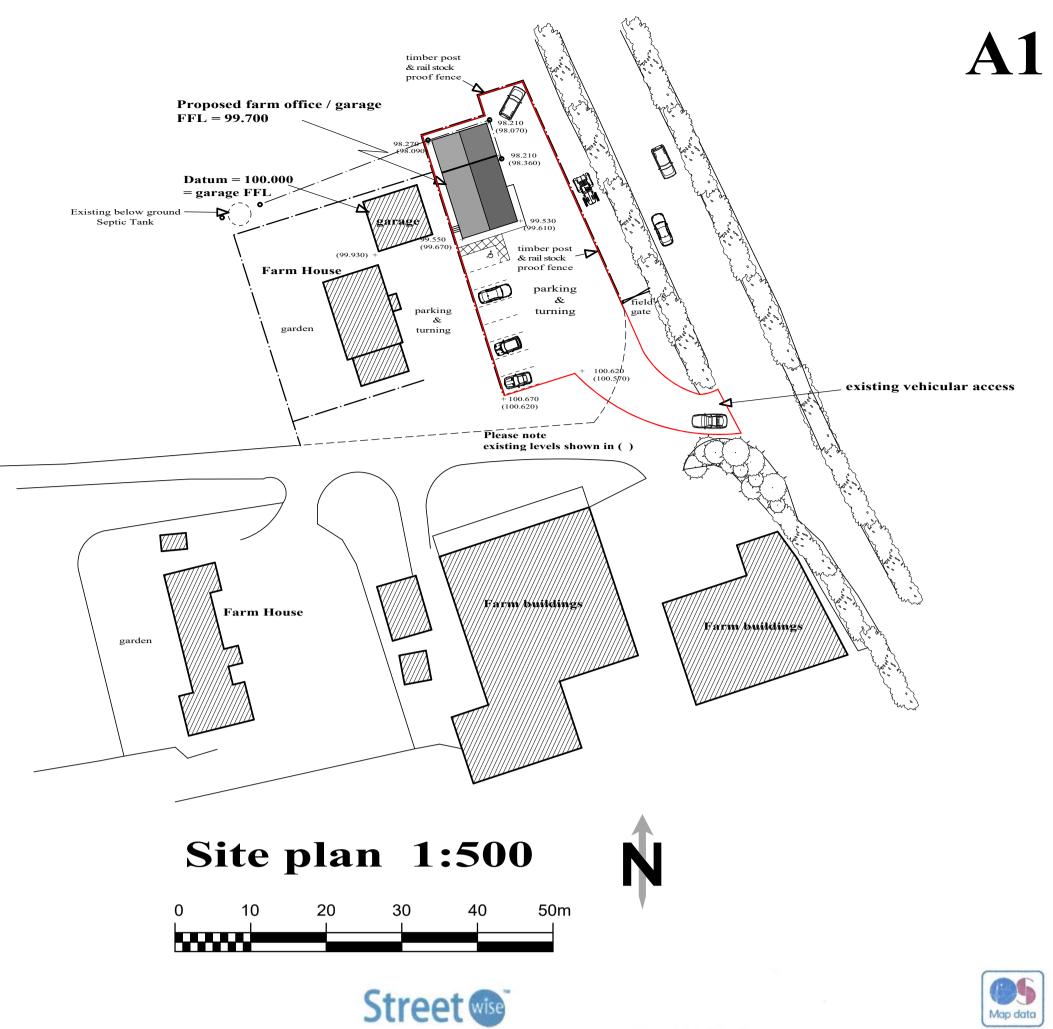

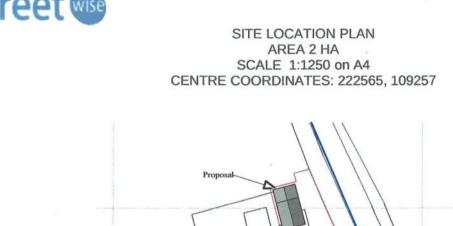

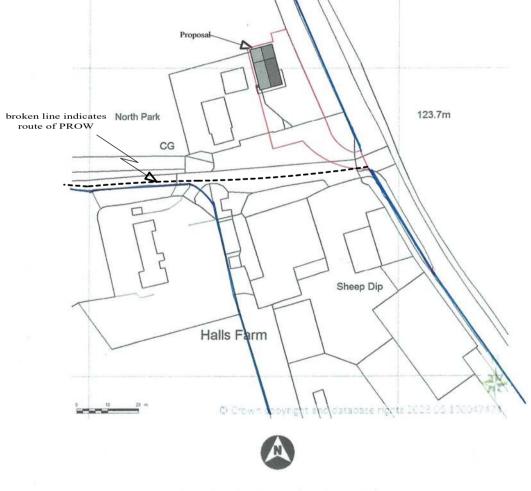

Supplied by Streetwise Maps Ltd www.streetwise.net Licence No: 100047474 20/06/2023 11:48

Location plan 1:1250

