


FLOOR SKETCH.

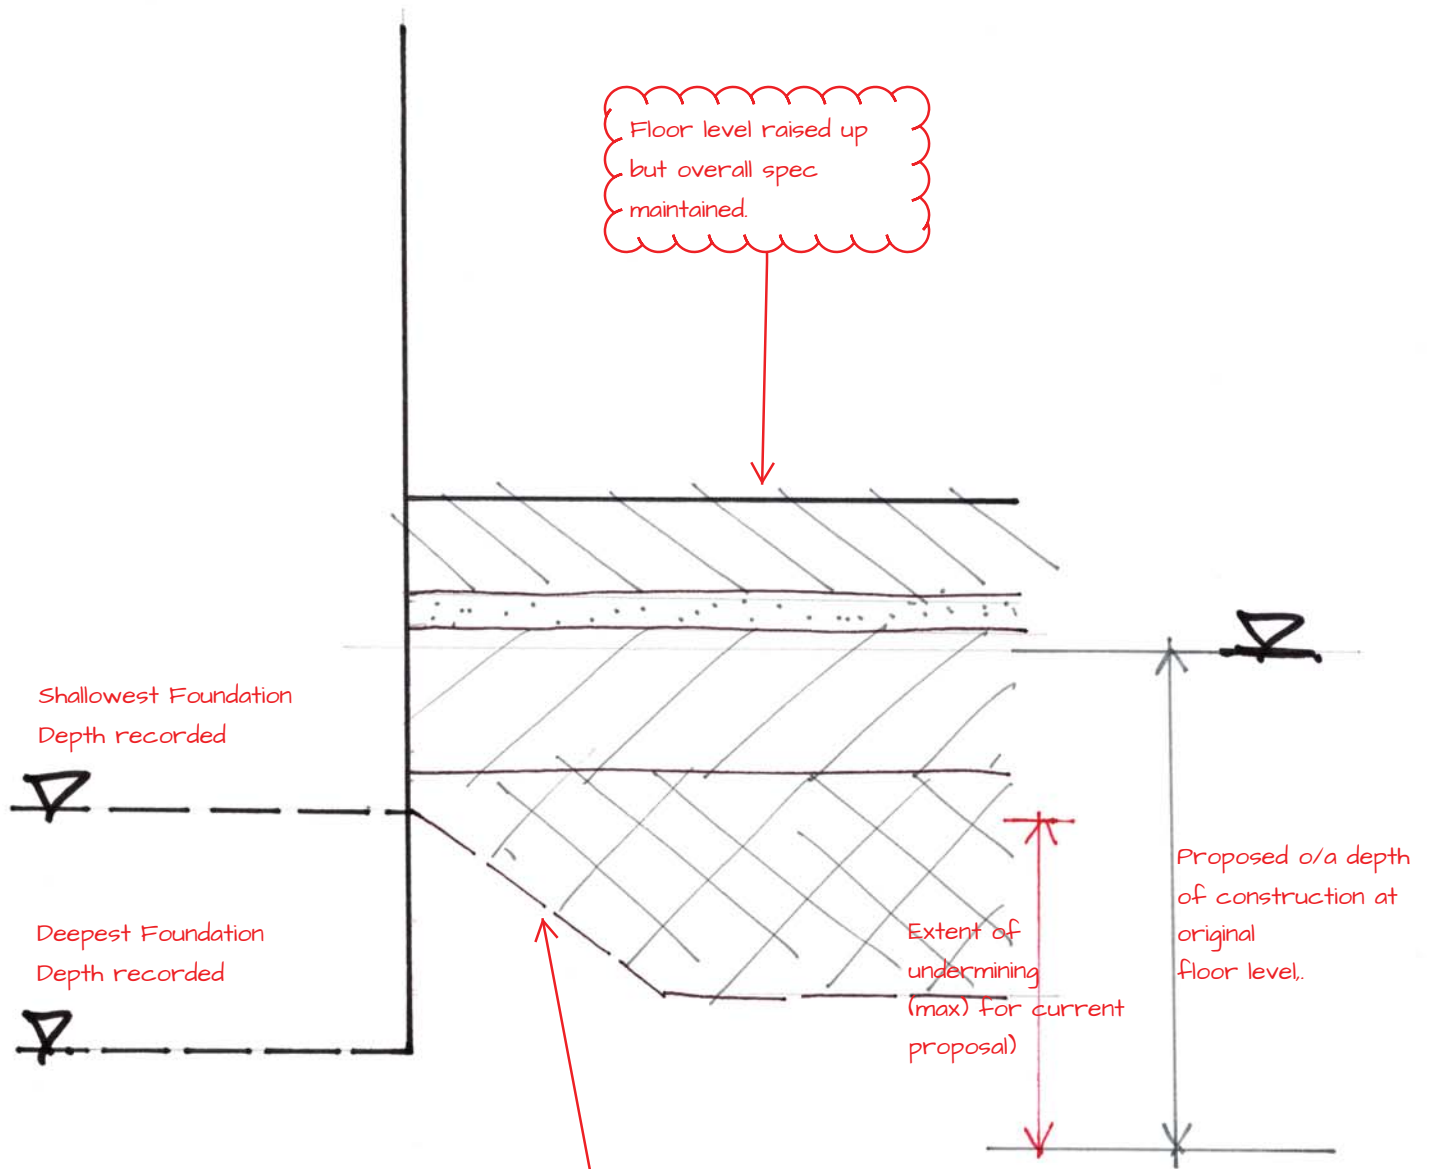

Where necessary to suit existing foundation depth taper depth of foamglass at perimeter to avoid undermining. Retain original soil batter to suit taper. Where existing foundation is deeper than proposed full dig there will be no requirement to taper.