


INSTALLATION MANUAL

Tarian 55/30 (45 mm)
Premium Plus Log Cabin

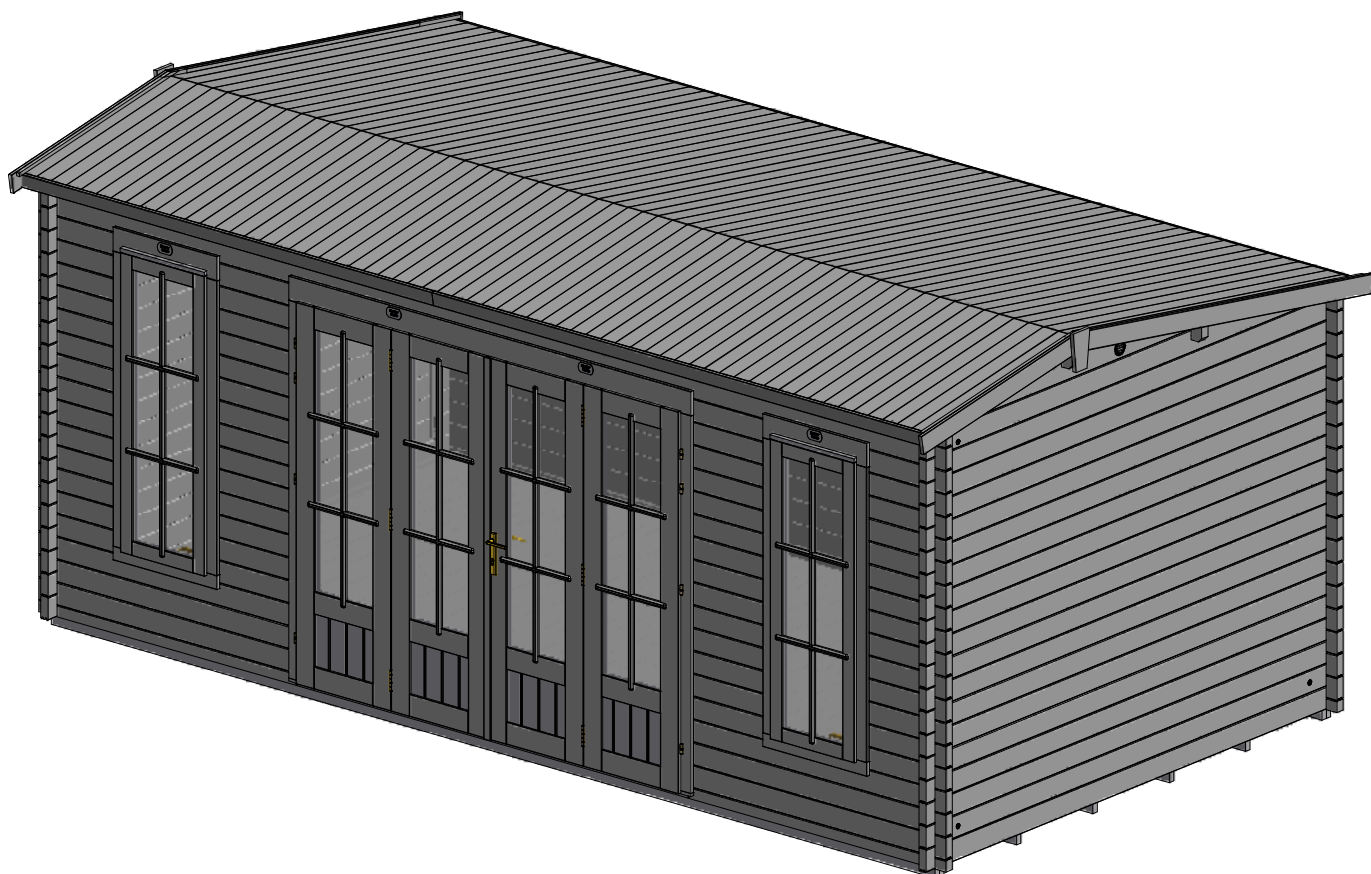

Important!

If you have bought shingles, please use our provided shingle installation instructions.


Unique Cabin Reference Number.

www.dunsterhouse.co.uk

Tarian 55/30 (45) Premium Plus Log Cabin Components

EN.5360

8 of required
Bearers
Pressure Treated



A45.495.70.0.0

28 of required
Wall log




A45.495.0.0.0

28 of required
Wall log




A45.1560.70.0.0

6 of required
Wall log




A45.3000.70.70.0

36 of required
Wall log




A45.5500.70.70.0

19 of required
Wall log
(Inc. one spare)

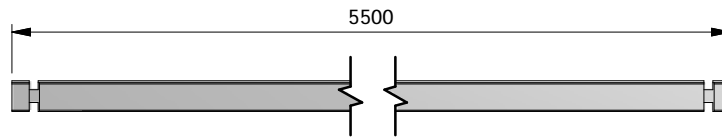


B45.1560.70.0.0

2 of required
Bottom Wall log




B45.5500.70.70.0

1 of required
Bottom Wall log




HN.3000

4 of required
Eaves edging

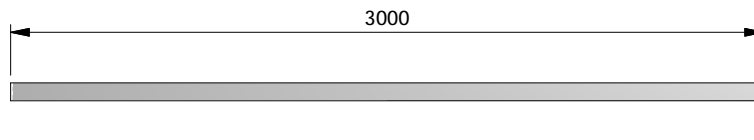

J.1960.A



4 of required
Storm brace



Tarian 55/30 (45) Premium Plus Log Cabin Components



J.3000

9 of required
Floor trims &
Roof edging reinforcement
(Required to be cut on site)





N.2000

6 of required
Apex trims & Wind braces
(Required to be cut on site)





P45.8R.5500.65.65.0.RP

1 of required
Purlin Assembly

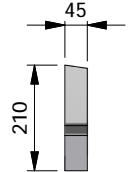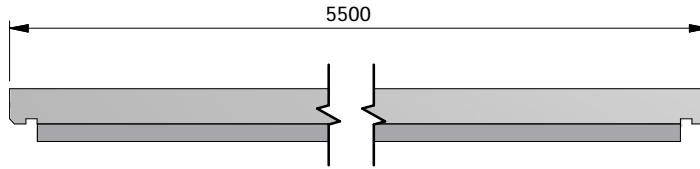



P45.5500.65.65.0.RP

1 of required
Purlin assembly

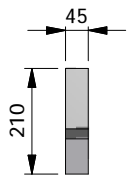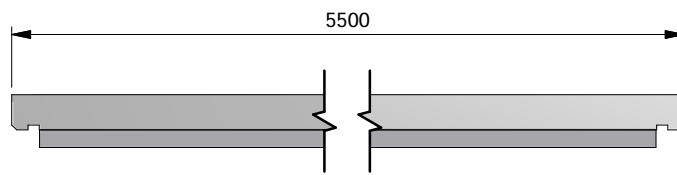



XN45.5500.70.70.0.C8

2 of required
Top wall log

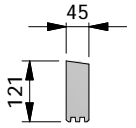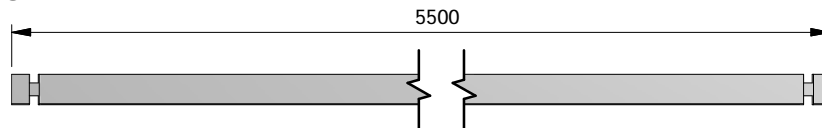



ZN.2150.C10

2 of required
Fascia board





ZN.1150.C10

2 of required
Fascia Board





Z.195.A

2 of required
Trapezoid

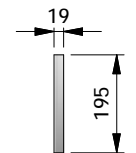

AP.45.3000.OA

2 of required
Apex

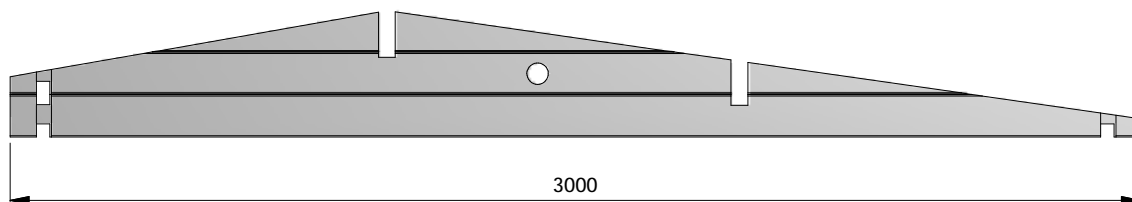

Tarian 55/30 (45) Premium Plus Log Cabin Components


Bi-fold door 45 mm

1 of required





Narrow window 45mm

2 of required

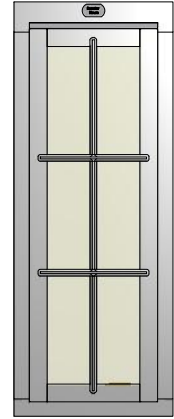



F.1070

62 of required
Roof board

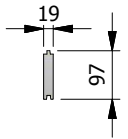



F.2070

62 of required
Roof boards

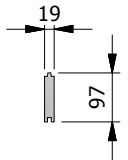

F.2770

60 of required
Floor boards
(Including one spare)

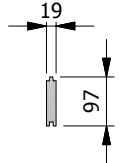


ACCESSORIES	
ITEM	QTY
40mm nails for floor and roof boards	670
35mm screw for securing door to first 3 wall logs, wind braces, roof edge reinforcements, apex trims, eaves edging and trapezoid	90
50mm screws for fascias and double bearers	30
55mm screws for floor trims	30
70mm screws for first logs, door frame and purlins	45
M6 x 80mm bolts and nuts for storm braces	8
M6 25mm washers for storm braces	16
20mm screws for vents	9
Door handle set and accessories	1
Narrow window accessories	2
Set of vents	2
Installation manual	1
Generic Window and Door Assembly Manual	1
Generic Assembly Instructions	1

Bearer Layout for Premium Plus Tarian 55/30

Log Cabin Bearer Layout Premium Plus Auval 55/30

We suggest preparing minimum overall base dimension of 5560x3060mm

For customers who have bought our rapid pad foundation system, we have shown the round pad layout on this diagram. To get more information on how to build this foundation system, please refer to the main rapid pad assembly instructions.

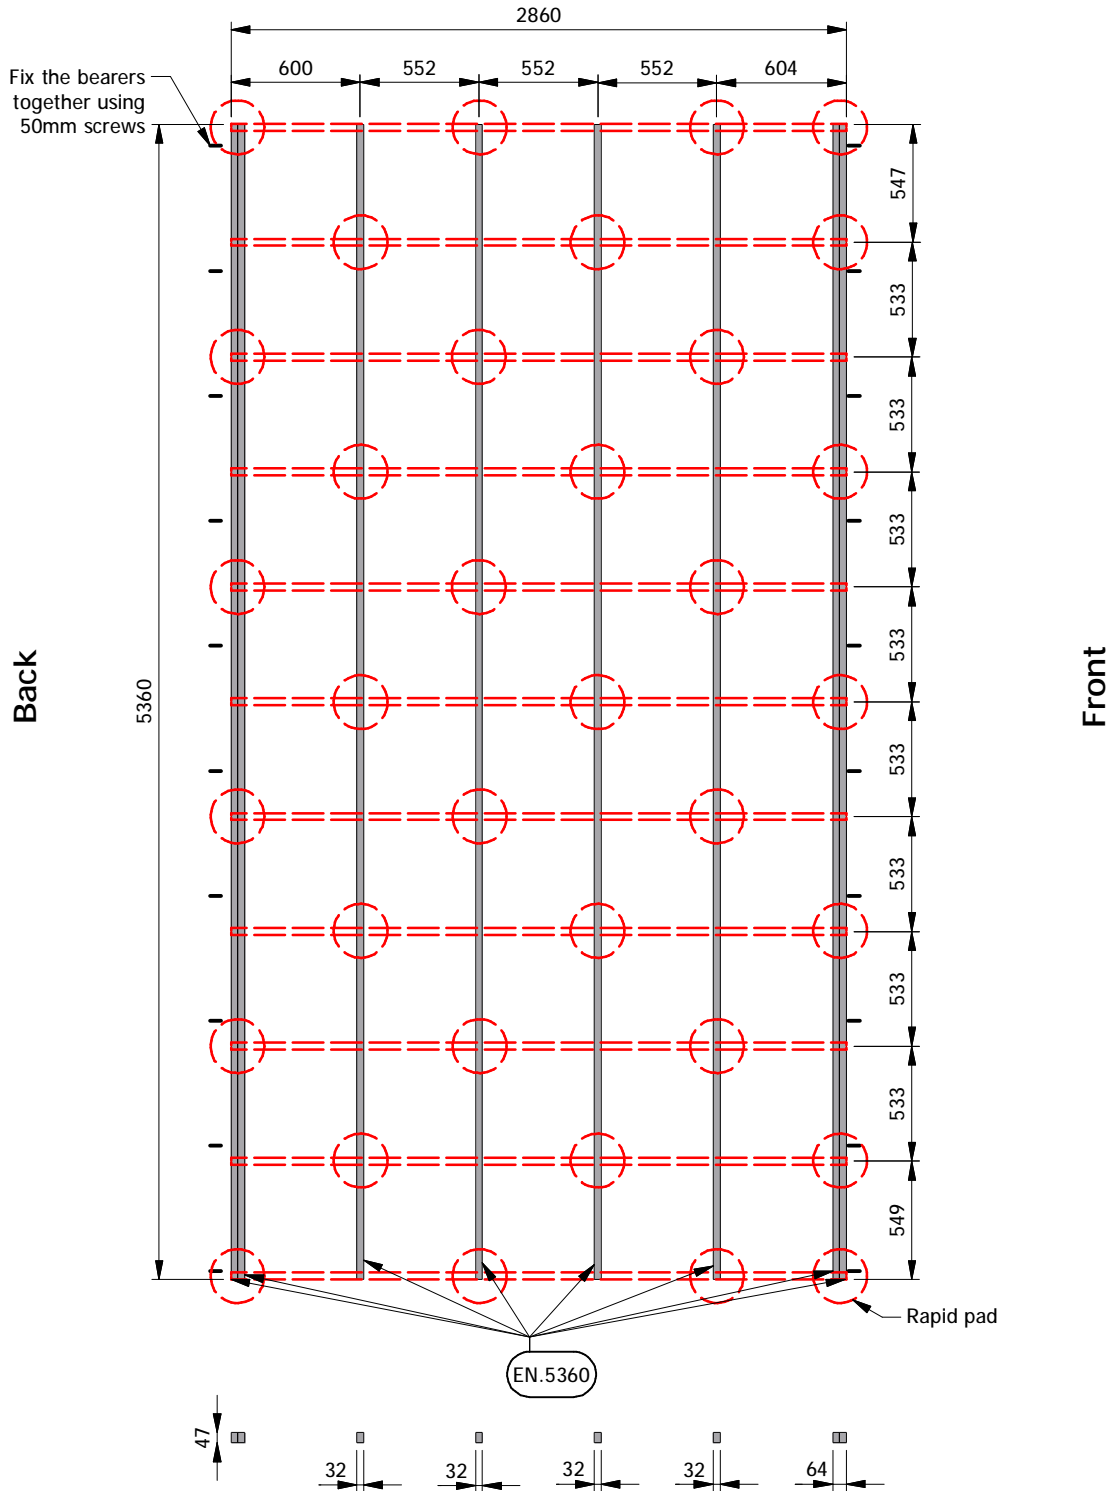


= Standard Bearers


= Optional Rapid Pad Assembly

Wall Layout for Premium Plus Tarian 55/30 (45mm)


Front Wall

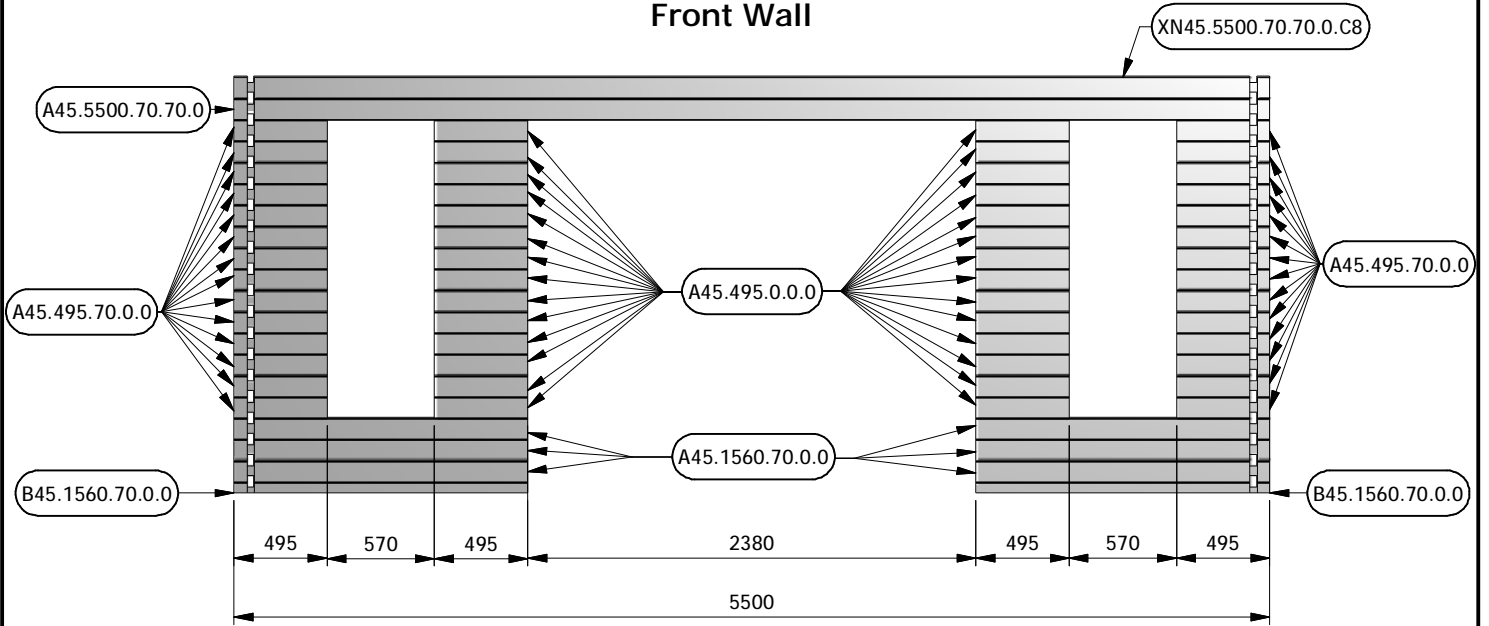



Rear Wall

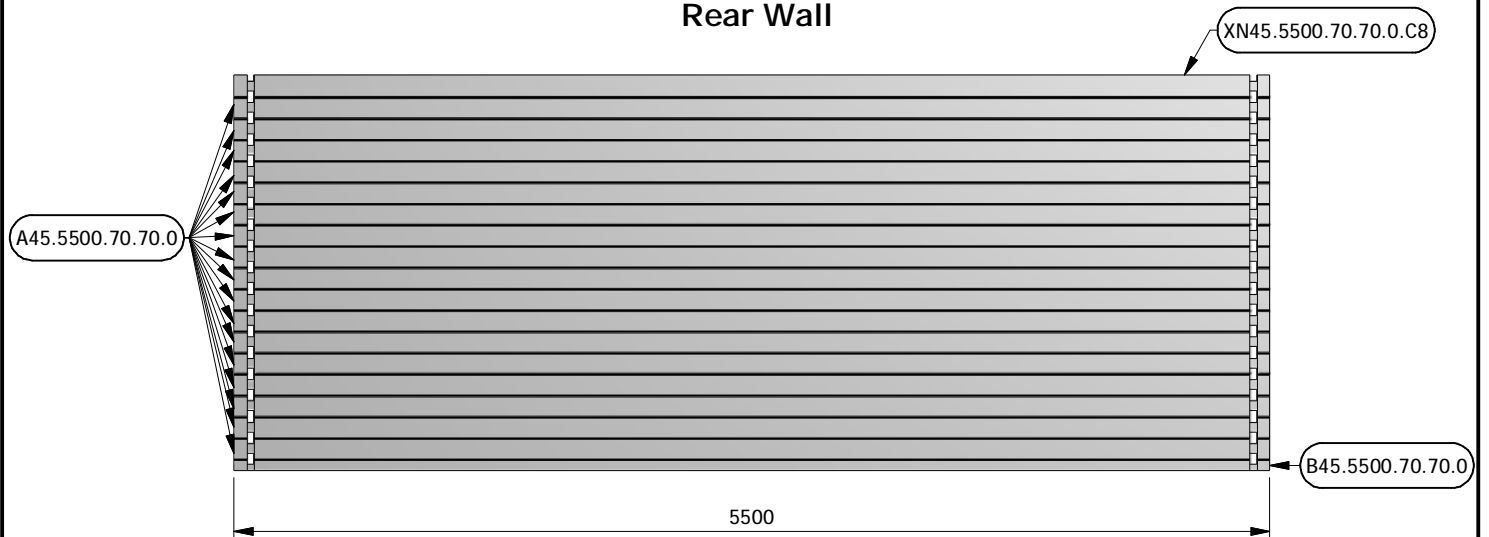

Side Walls

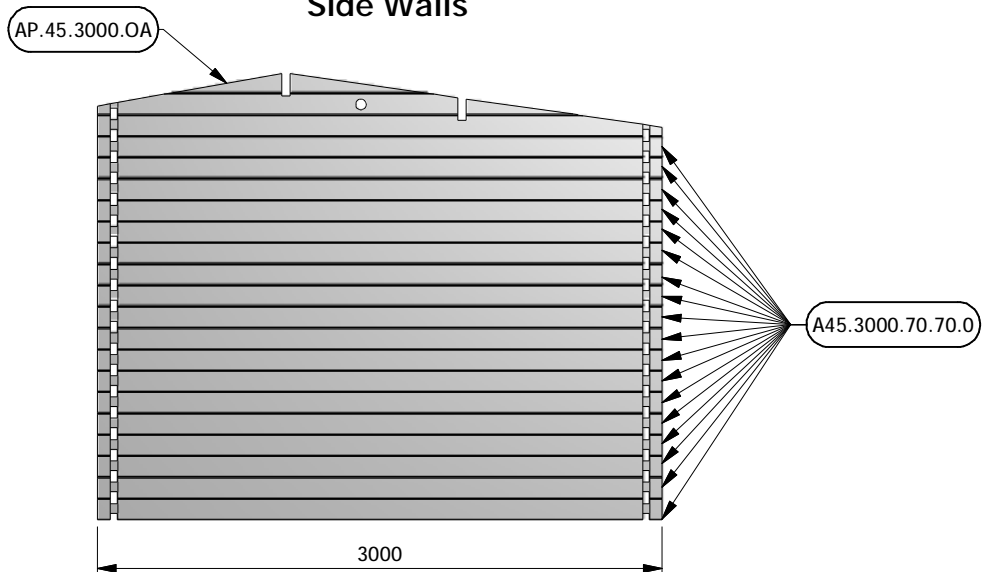


Purlin and Roof Installation for Premium Plus Tarian 55/30 (45mm)

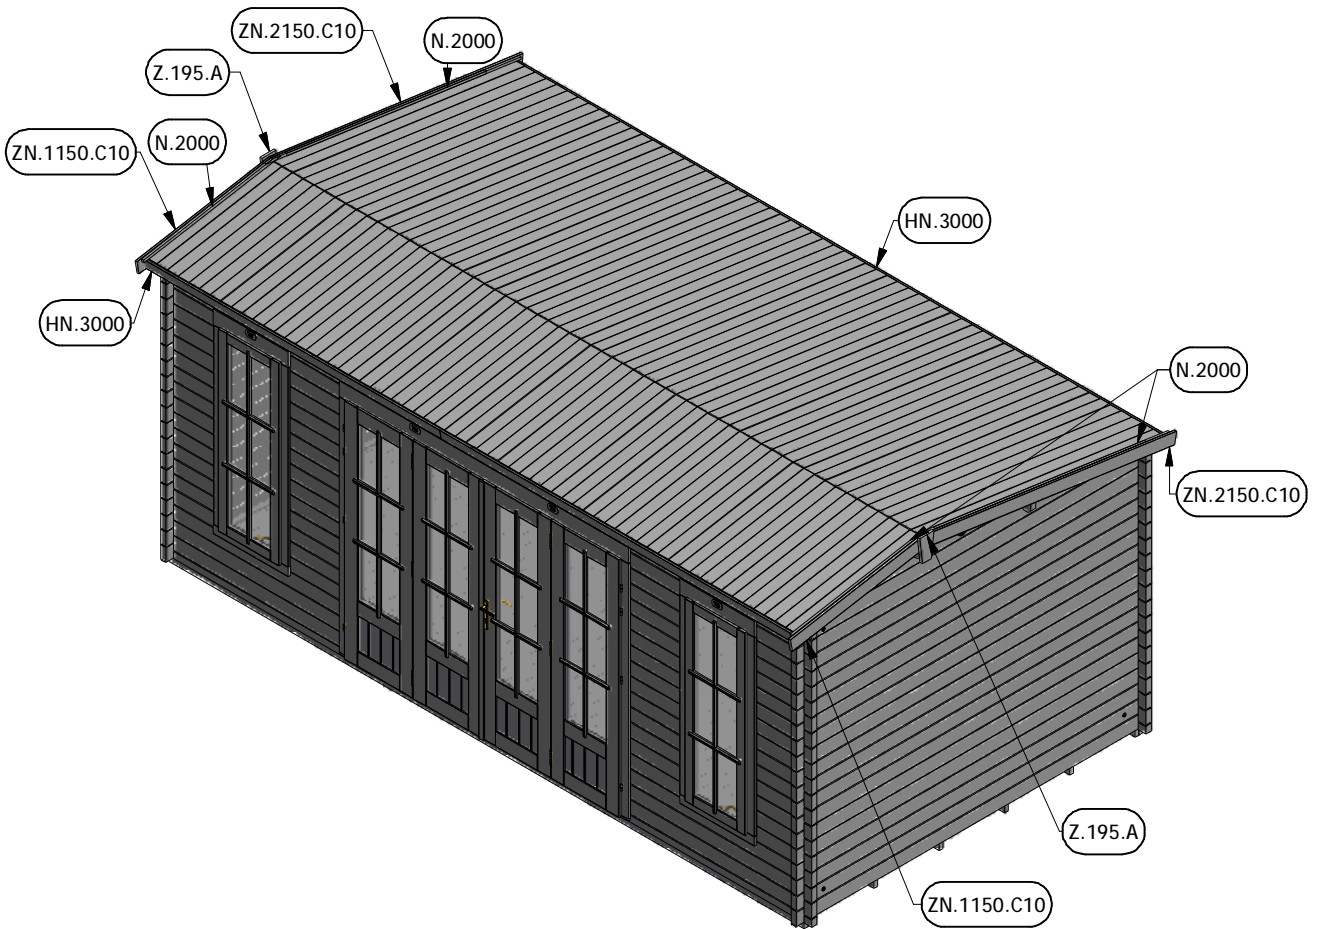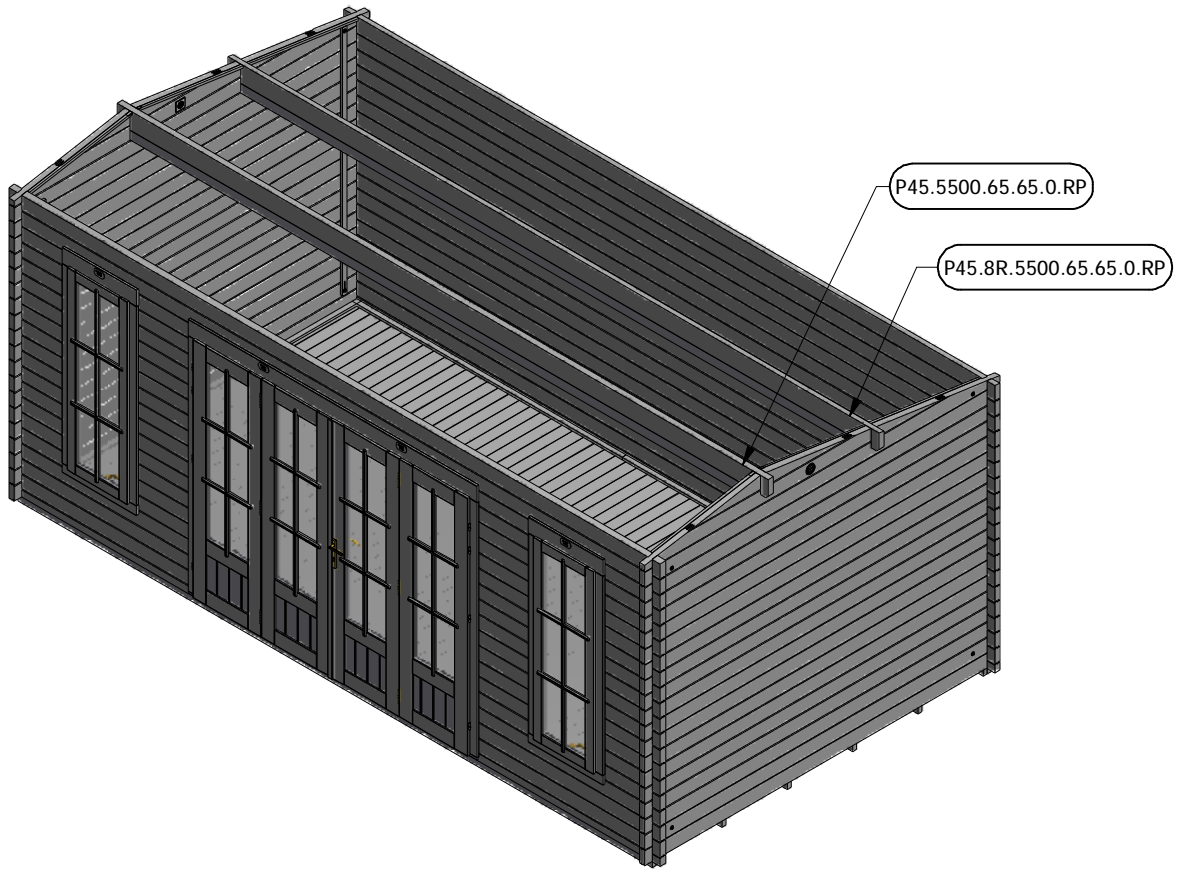


Roof Insulation Panel Layout for Premium Plus Tarian 55/30

Rear Elevation

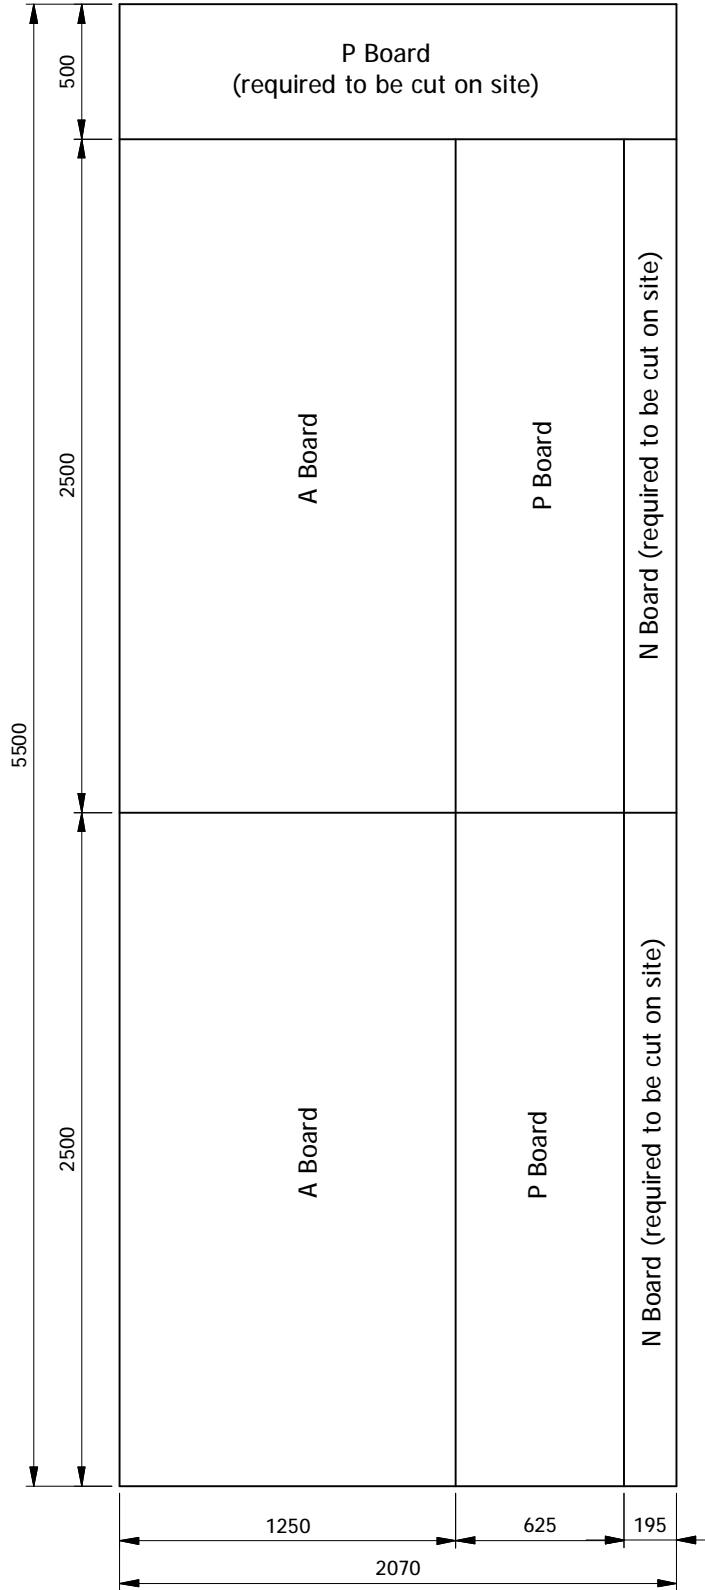

Front Elevation

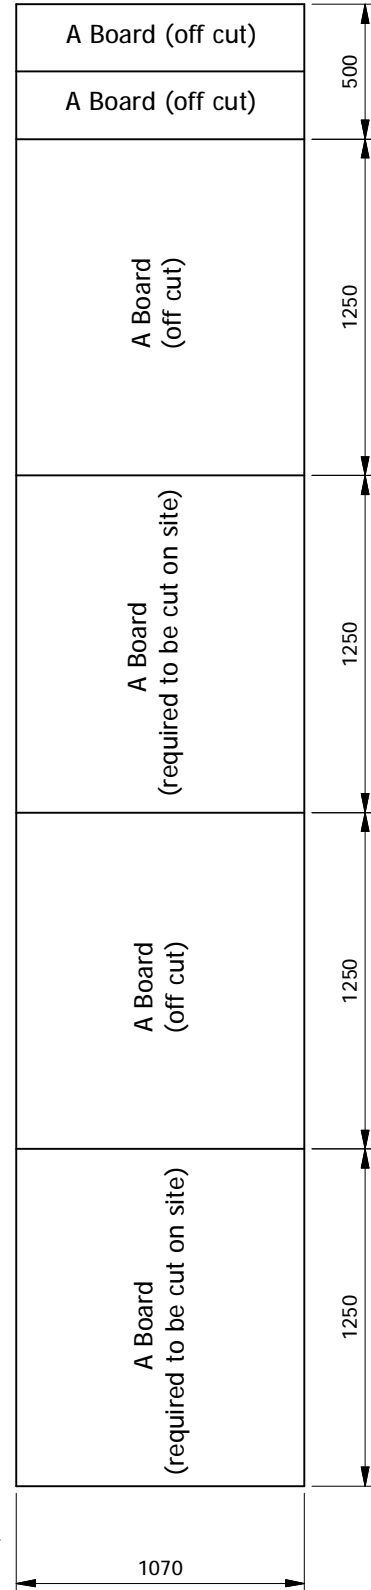

INSULATION BOARDS	
Description	Qty
Panel A (1250x2500mm)	4
Panel P (625x1250mm)	3
Panel N (310x1250mm)	2

SCREWS AND METAL BRACKETS	
Description	Qty
Diameter 3x50mm Screws for roof insulation	160
Diameter 3x20mm Screws for metal brackets	70
Metal brackets	16