


Replace modern door for traditional style

Replace modern window Replace modern for traditional casement

1 door style

New french door in Replace UPVC conservatory C20th fabric with steel/glass lean-to

ELEVATION SOUTH

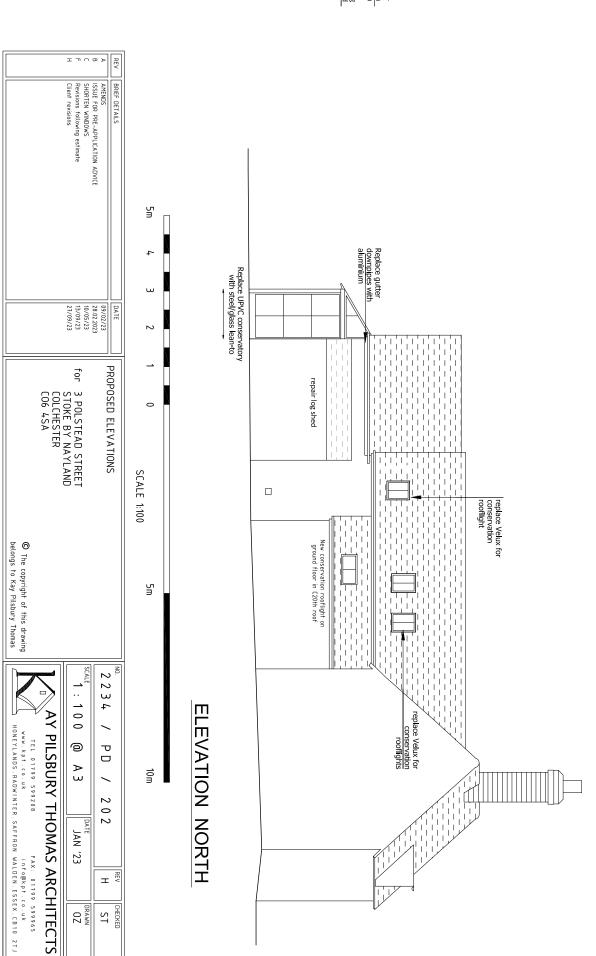

ELEVATION EAST



- THESE / ARE PLANNING DRAWINGS AND SHOULD ONLY BE USED FOR THAT PURPOSE ARE NOT CONSTRUCTION DRAWINGS
- NOTES

Replace modern UPVC window in dormers for traditional timber casement