


A3

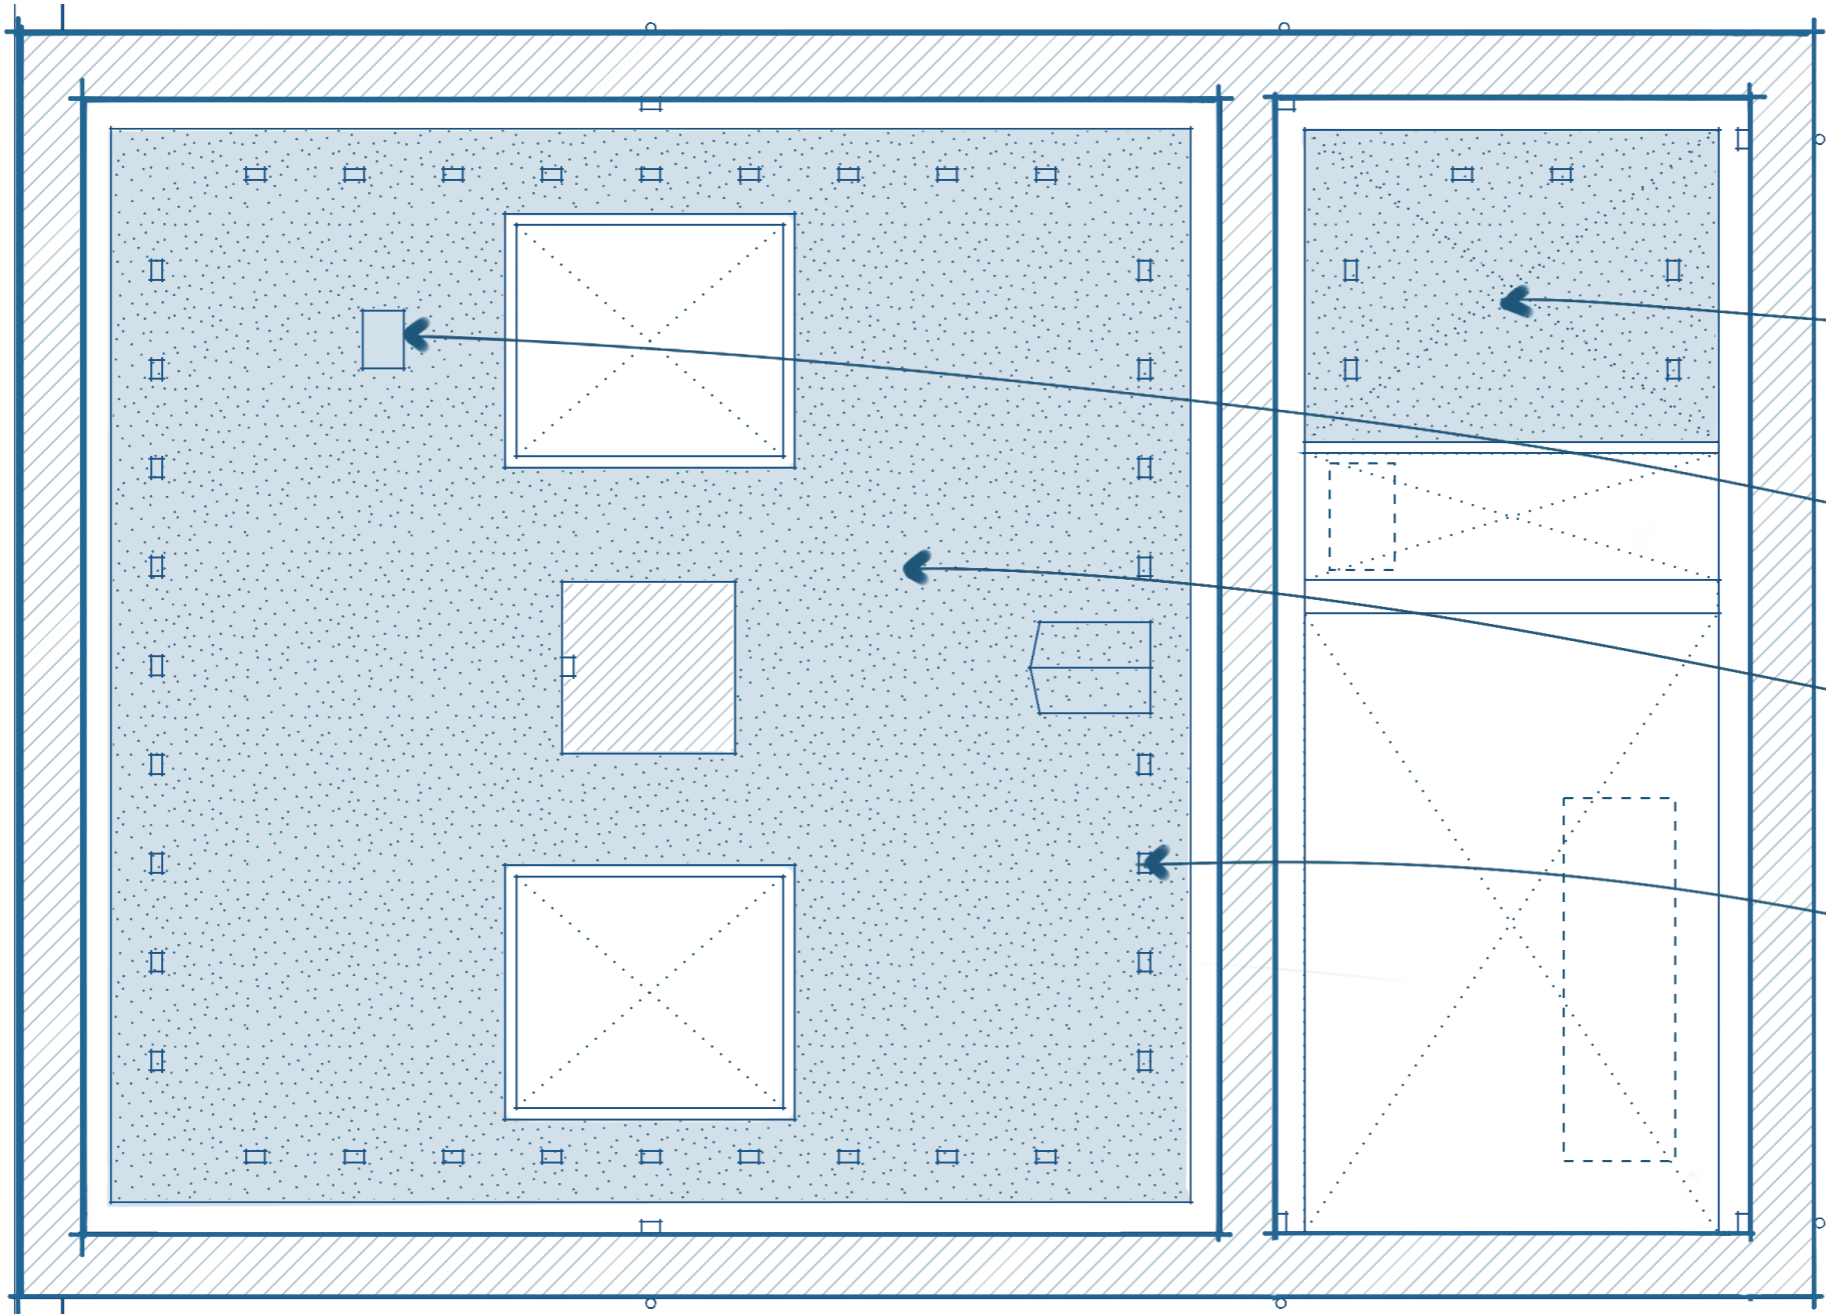

INSULATE THE ROOF SPACE WITH SHEEP'S WOOL INSULATION AS P10-10

INSULATE THE BACK OF THE LOFT HATCH AS P10-20

INSULATE THE ROOF SPACE WITH SHEEP'S WOOL INSULATION AS P10-10

SLATE VENTS AS H62-86 - POSITIONED SEVERAL COURSES ABOVE THE PARAPET GUTTER, CLEAR OF INSULATION, SO AS NOT TO BE VISIBLE FROM GROUND LEVEL.