

IMPORTANT NOTES: The Masonry Levels and Post Plan in this set of drawings is not an engineered foundation design and is to be read in conjunction with any additional foundation and building regulations drawings. It shows only the levels and positions at which the superstructure sits. You, the client, are to seek a suitable substructure foundation design from an engineer. Your builder will typically have a preferred foundation designer they can recommend. Oakwrights do not clean the oak frame, please refer to your aftercare pack from your project manager on details of how to clean your oak frame



South Elevation


AS PER INDUSTRY STANDARDS, YOU ARE STRONGLY ADVISED NOT TO ORDER YOUR WINDOWS FROM THE DRAWINGS, BUT TO ACTUALLY MEASURE THE STRUCTURAL OPENINGS ON SITE



Indicative Image 01.



Indicative Image 02.

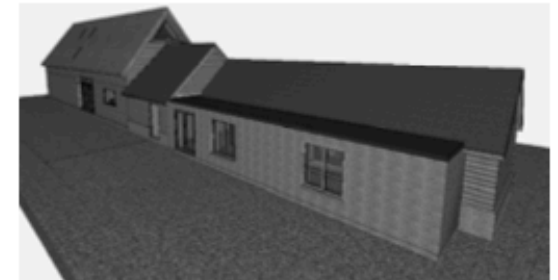


Indicative Image 03.



Indicative Image 04.



Indicative Image 05.

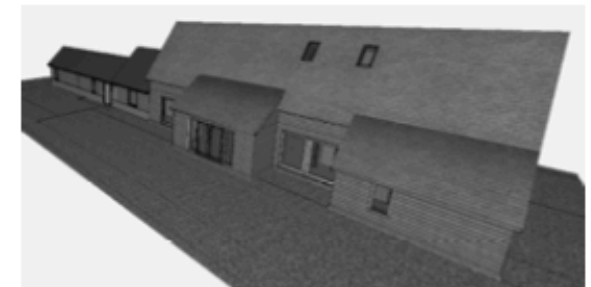

Indicative Image 06.