

INSTALLATION AND USER MANUAL

Thank you for choosing inverter heat pump.

This manual provides you necessary information for optimal use and maintenance, please read it carefully and keep it for subsequent use.






3. Technical specification

	GHD-150		GHD-150	GHD-150		GHD-150					
Model	-0191		-0185	-0186		-0188					
Applied pool volume (m³)	20~40		30-60	40-75		65-120					
Working air temp (°C)	-7~43										
Performance Condition: Air 26°C, Water 26°C, Humidity 80%											
Heating capacity (kW)	9.8		13.3	17.3		27.9					
Heating capacity (kW) in silence mode	7.8		10.4	13.8		21.8					
C.O.P	6.4~15.0		6.4~15.0	6.3~15.2		6.3~15.3					
C.O.P in silence mode	7.4~15.0		7.4~15.0	7.3~15.2		7.3~15.3					
Performance Condition: Air 15°C, Water 26°C, Humidity 70%											
Heating capacity (kW)	6.5		9.4	11.4		18.0					
Heating capacity (kW) in silence mode	5.1		7.4	8.8		14.6					
C.O.P	4.4~7.6		4.4~7.6	4.3~7.8		4.4~7.9					
C.O.P in silence mode	5.1~7.6		5.1~7.6	5.2~7.8		5.1~7.9					
Rated input power(kW)	1.4~0.2		2.1~0.25	2.6~0.33		4.0~0.58					
Rated input current (A)	6.4~0.86		9.1~1.1	10.9~1.4		17.4~2.5					
Max input current(A)	9.0		11.0	13.5		21.0					
Power supply	230V/1 Ph/50Hz										
Advised water flux (m³/h)	3~4		5~7	6.5~8.5		10~12					
Sound pressure 1m dB(A)	39.3~48.0		42.8~52.1	44.2~52.9		48.6~55.5					
Sound pressure 10m dB(A)	19.3~28.0		22.8~32.1	24.2~32.9		28.6~35.5					
Water pipe in-out Spec (mm)	50										
Net Dimension LxWxH (mm)	961×312×658		961*312*658	961*392*658		1090*420*960					
Net Weight (kg)	45		52	63		90					


- 1. The values indicated are valid under ideal conditions: Pool covered with an isothermal cover, filtration system running at least 15 hours a day.
- 2. Related parameters are subject to adjustment periodically for technical improvement without further notice. For details please refer to nameplate.



1 The heat pump should be installed in a place with good ventilation

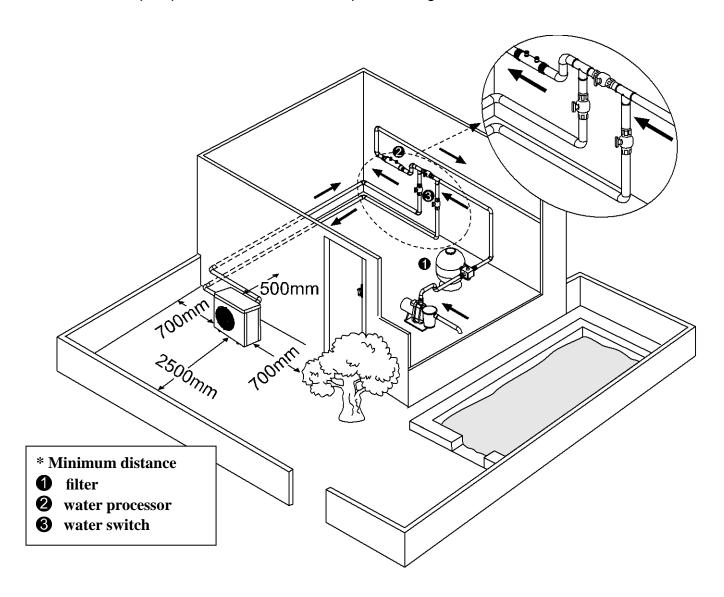



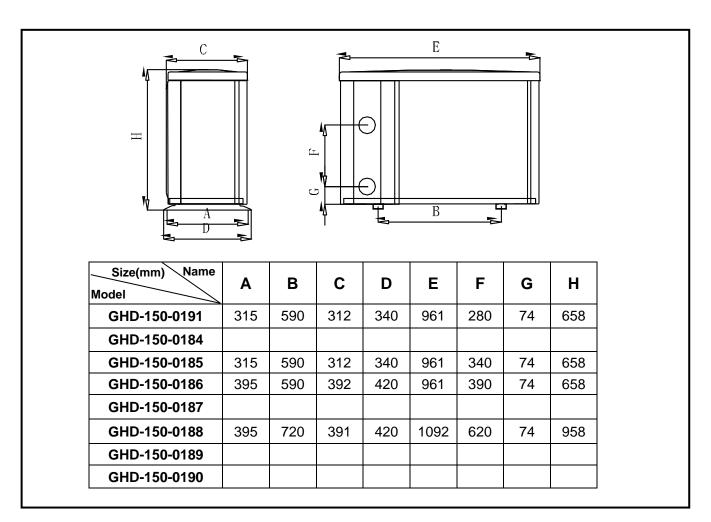

%Above data is subject to modification without notice.

2.2.2. Heat pump installation.

- 1) The frame must be fixed by bolts (M10) to concrete foundation or brackets. The concrete foundation must be solid; the bracket must be strong enough and anti-rust treated;
- ② The heat pump needs a water pump (Supplied by the user). The recommended pump specification-flux: refer to Technical Parameter, Max. lift ≥10m
- 3 When the heat pump is running, there will be condensation water discharged from the bottom, please pay attention to it. Please insert the drainage tube(accessory) into the hole and clip it well, then connect a pipe to drain off the condensation water.

2.2.3. Wiring & protecting devices and cable specification


- Connect to appropriate power supply, the voltage should comply with the rated voltage of the products.
- (2) Well earth the heat pump.
- Wiring must be connected by a professional technician according to the circuit diagram.
- (4) Set breaker or fuse according to the local code (leakage operating current ≤ 30mA).
- (5) The layout of power cable and signal cable should be orderly and not affecting each other.






1. Wiring diagram

230V 50Hz A. For power supply:

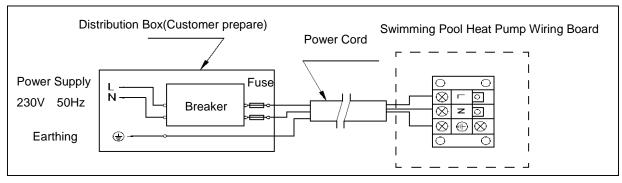

B. For power supply: 400V

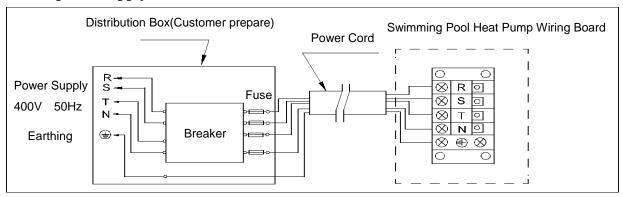

Note: For your safe use in winter, it's strongly recommended to equip heating priority function. For the detailed wiring diagram, please refer to Appendix 1.



2. Options for protecting devices and cable specification

MODEL		GHD-150 -0191	GHD-150 -0185	GHD-150 -0186	GHD-150 -0188	
Breaker	Rated Current A	11	13	16	25	
	Rated Residual Action Current mA	30	30	30	30	
Fuse A		11	13	16	25	
Power Cord (mm ²)		3×1.5	3×2.5	3×2.5	3×6	
Signal cable (mm²)		3×0.5	3×0.5	3×0.5	3×0.5	

NOTE: The above data is adapted to power cord ≤ 10m. If power cord is >10m, wire diameter must be increased. The signal cable can be extended to 50m at most.

